



More info at:
WWW.TRAKRACER.COM








or follow us at:



@TRAKRACER

TR80-KBMMS - MANUAL VERSION 1A

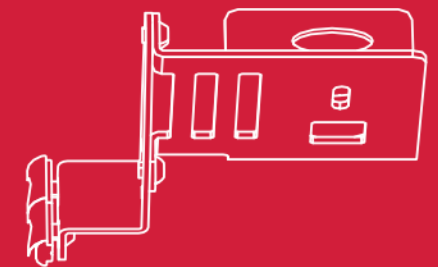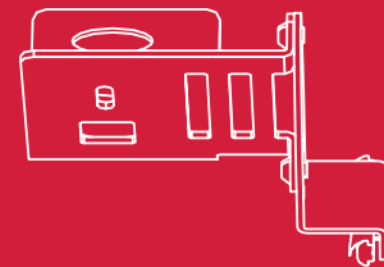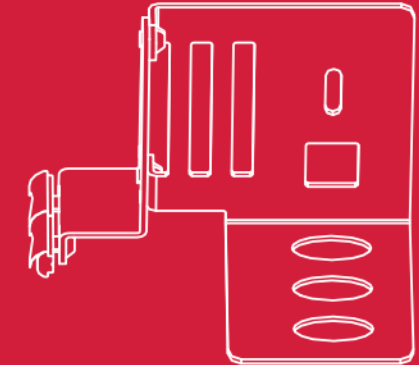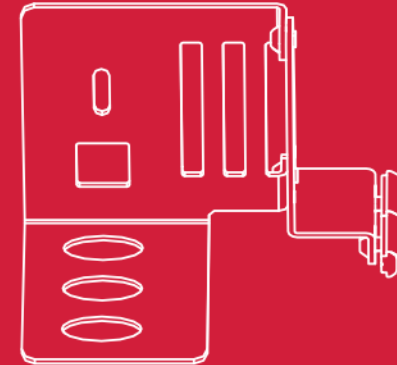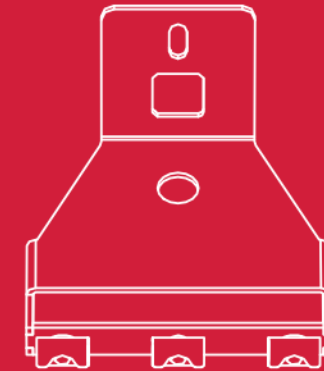

TR-SPMT-TR8020

Assembly Guide




IMPORTANT: Different regions may have different models. Please ensure the part numbers on the following pages match those on your product packaging.

TR-SPMT-TR8020 PART LIST


ACCESSORIES(NOTE:Extrahardware may be included as spare parts)

A

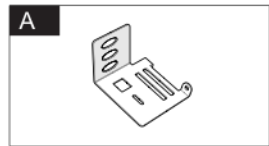


Speaker Bracket Side A
SPMT-A X4

AA

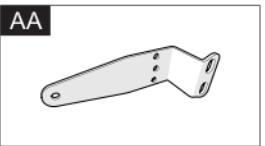


Speaker Bracket Side B
SPMT-B X4


AB

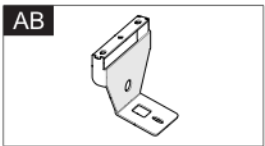Speaker Bracket Middle
SPMT-M X1


AC

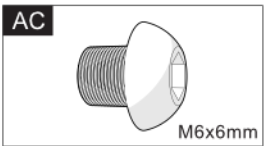M6x6 Round Hex Screw
SR-M6-6 X8

AD

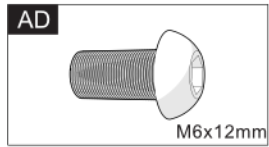Seat Bracket Panel
SR-M6-12 X11

AE

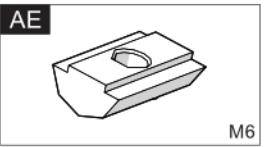Ball Bearing Nut
NS-M6 X11

ASSEMBLY INSTRUCTIONS

TR-SPMT-TR8020

01

A X4




AA X4



AB X8




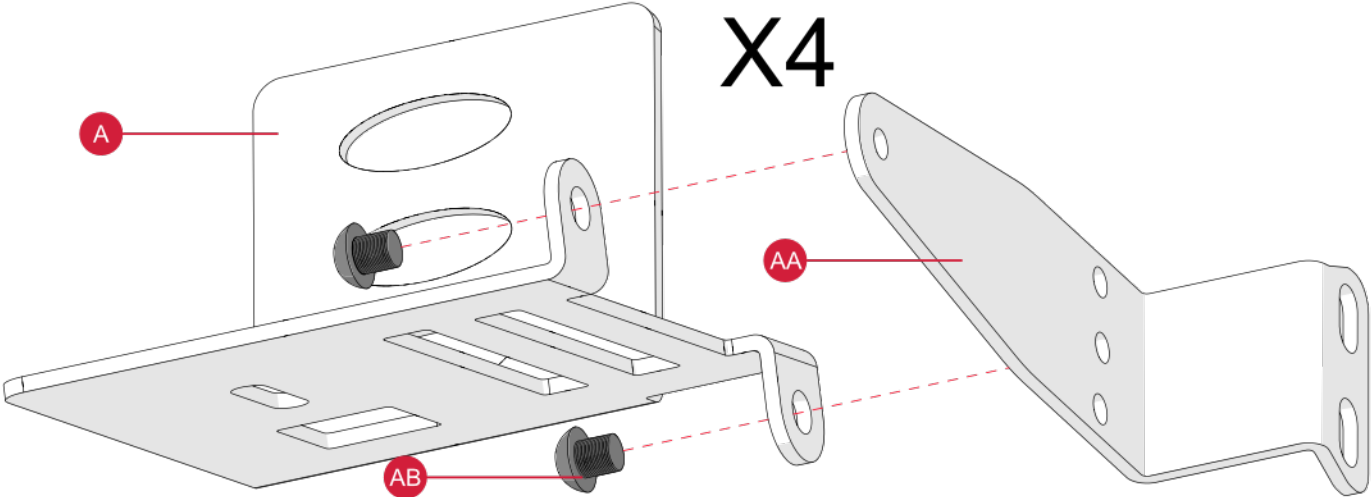

ASSEMBLY INSTRUCTIONS

TR-SPMT-TR8020

02

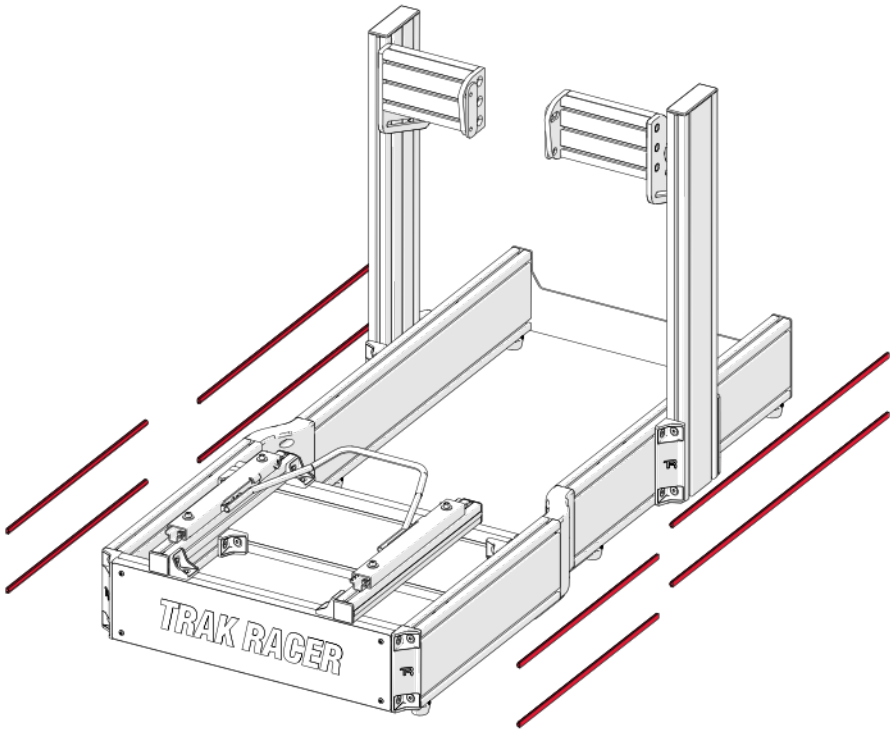


03

A X4




AA X8

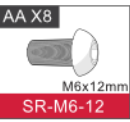

AB X8




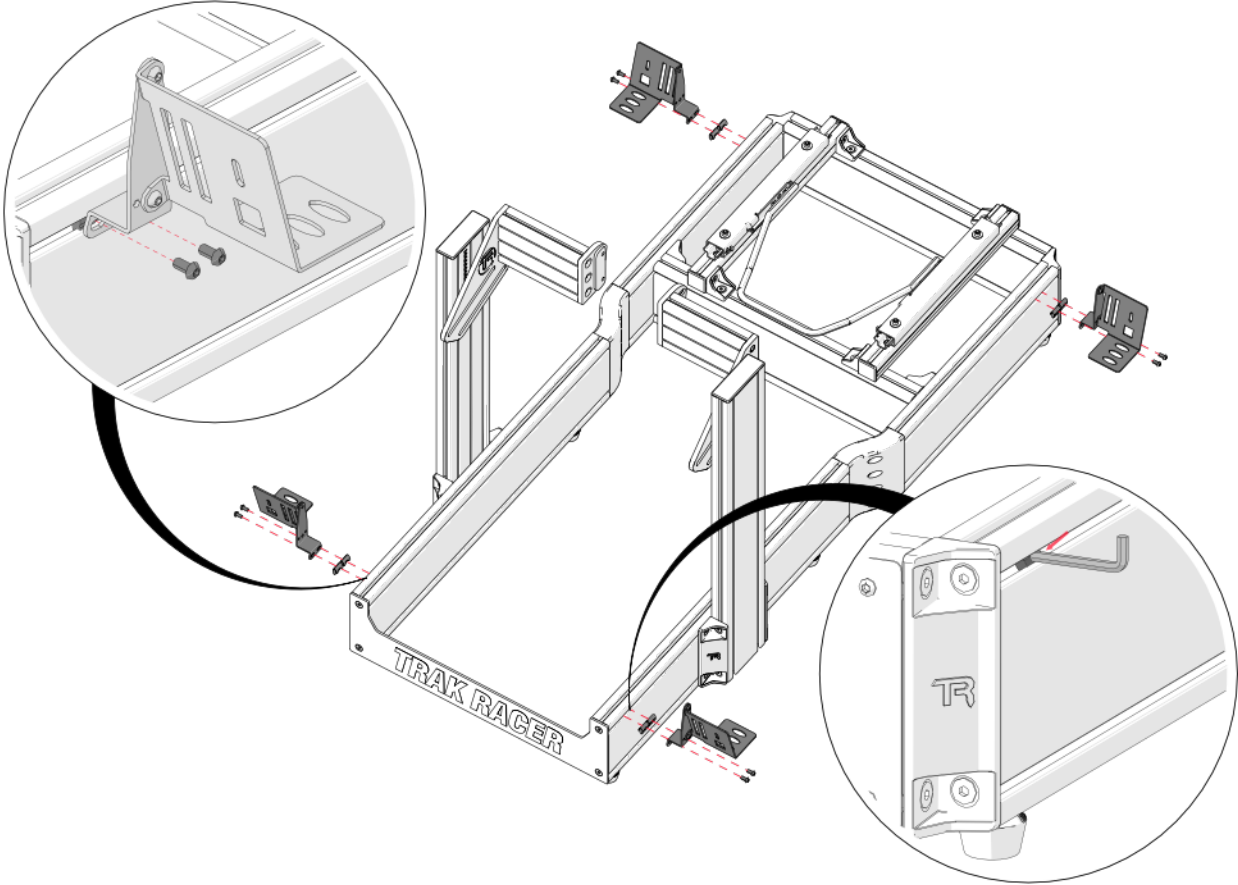


ASSEMBLY INSTRUCTIONS

TR-SPMT-TR8020

04

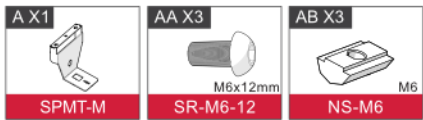

OPTION # 1

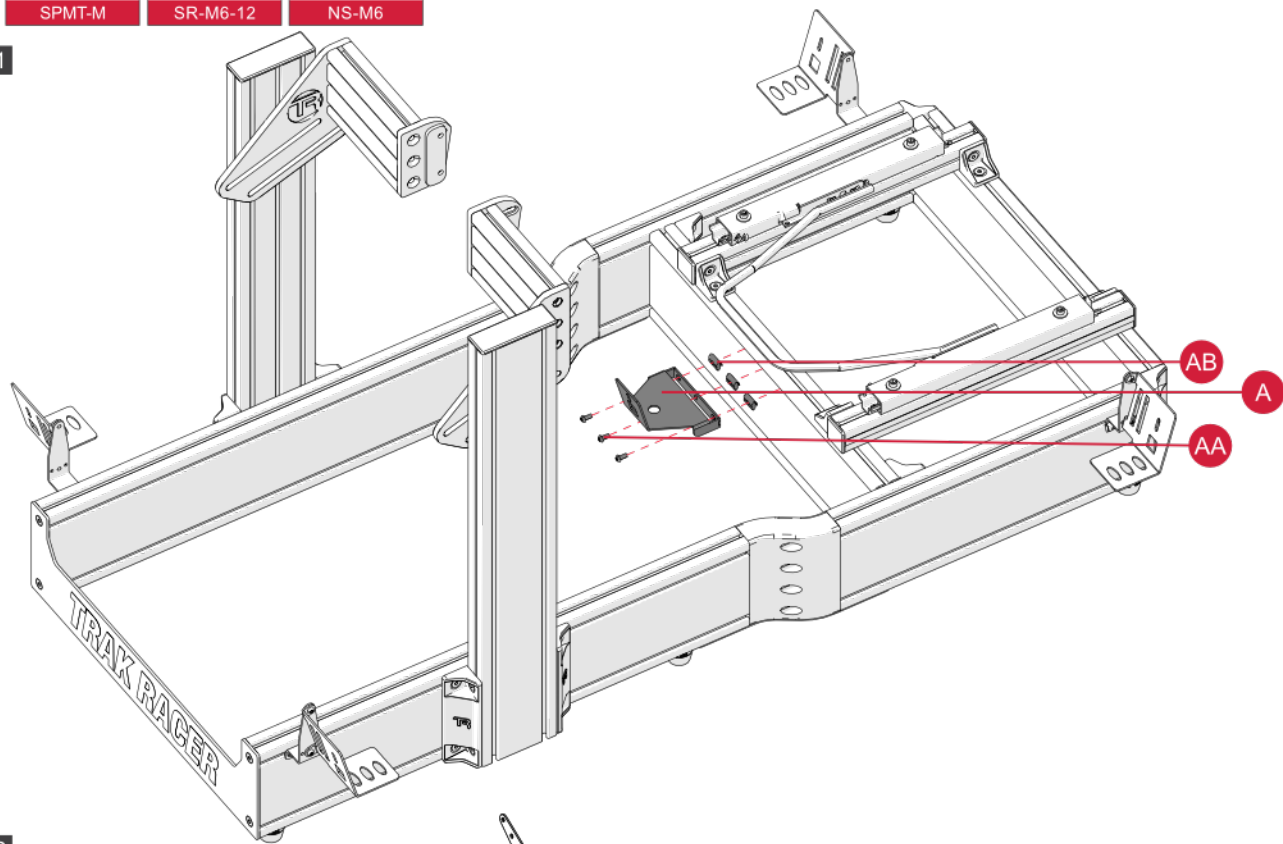

OPTION # 2

