


800MM EXTRUDED ALUM WITH VESA MOUNT

Instruction manual

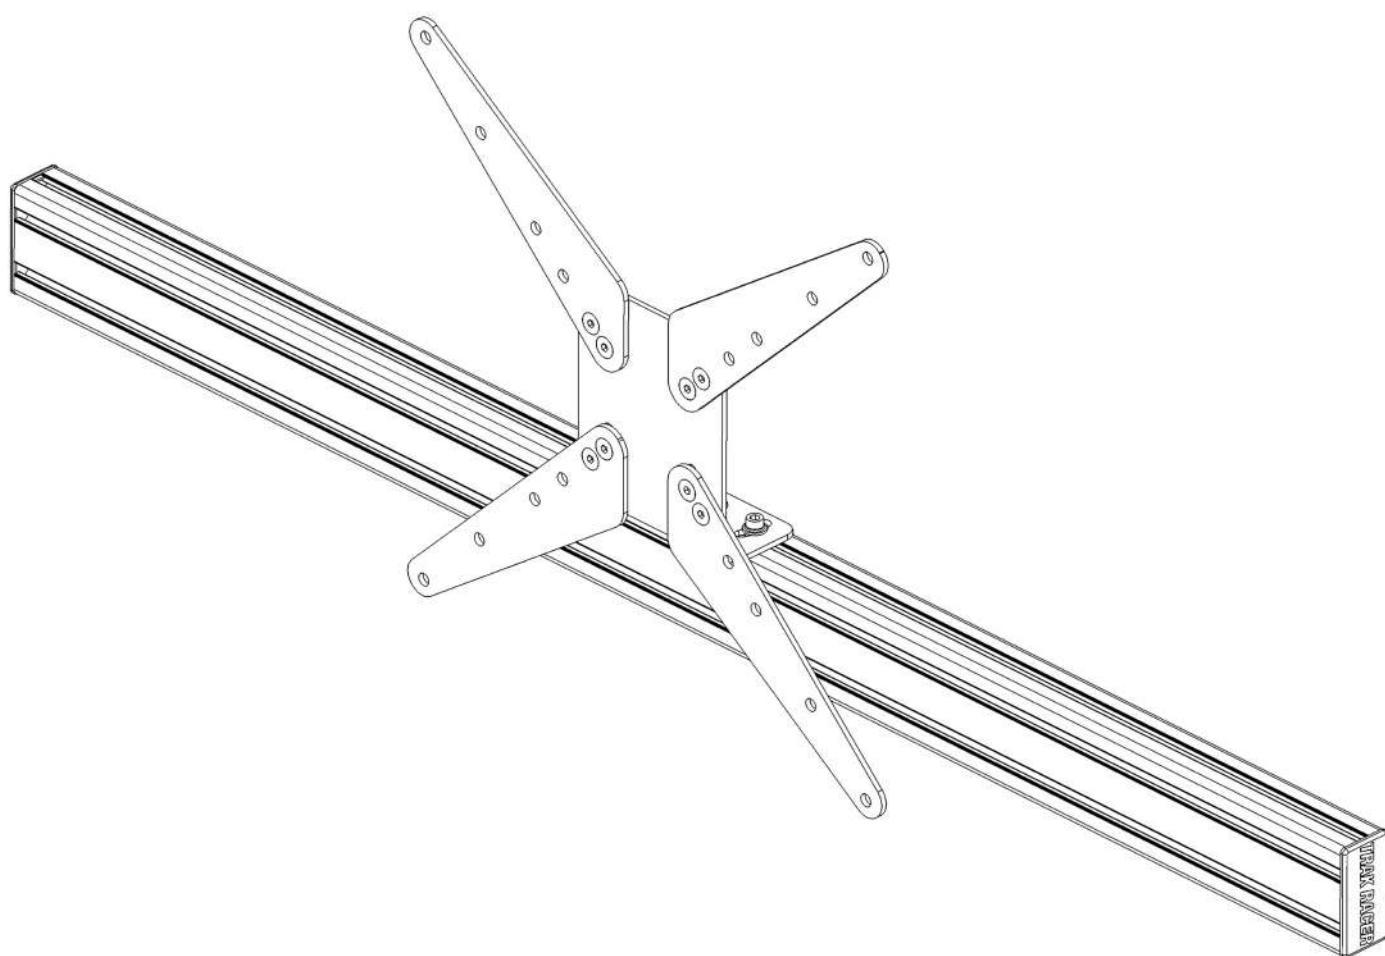

TR80-TMSML3






- Two people needed



- Tighten hardware



- Leave hardware loose for adjustment

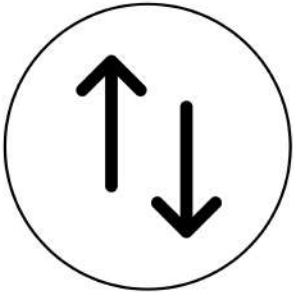

- Make Adjustment





- Break tab off Corner bracket CB1
(Page 6)




- Safety glasses needed

NOTE

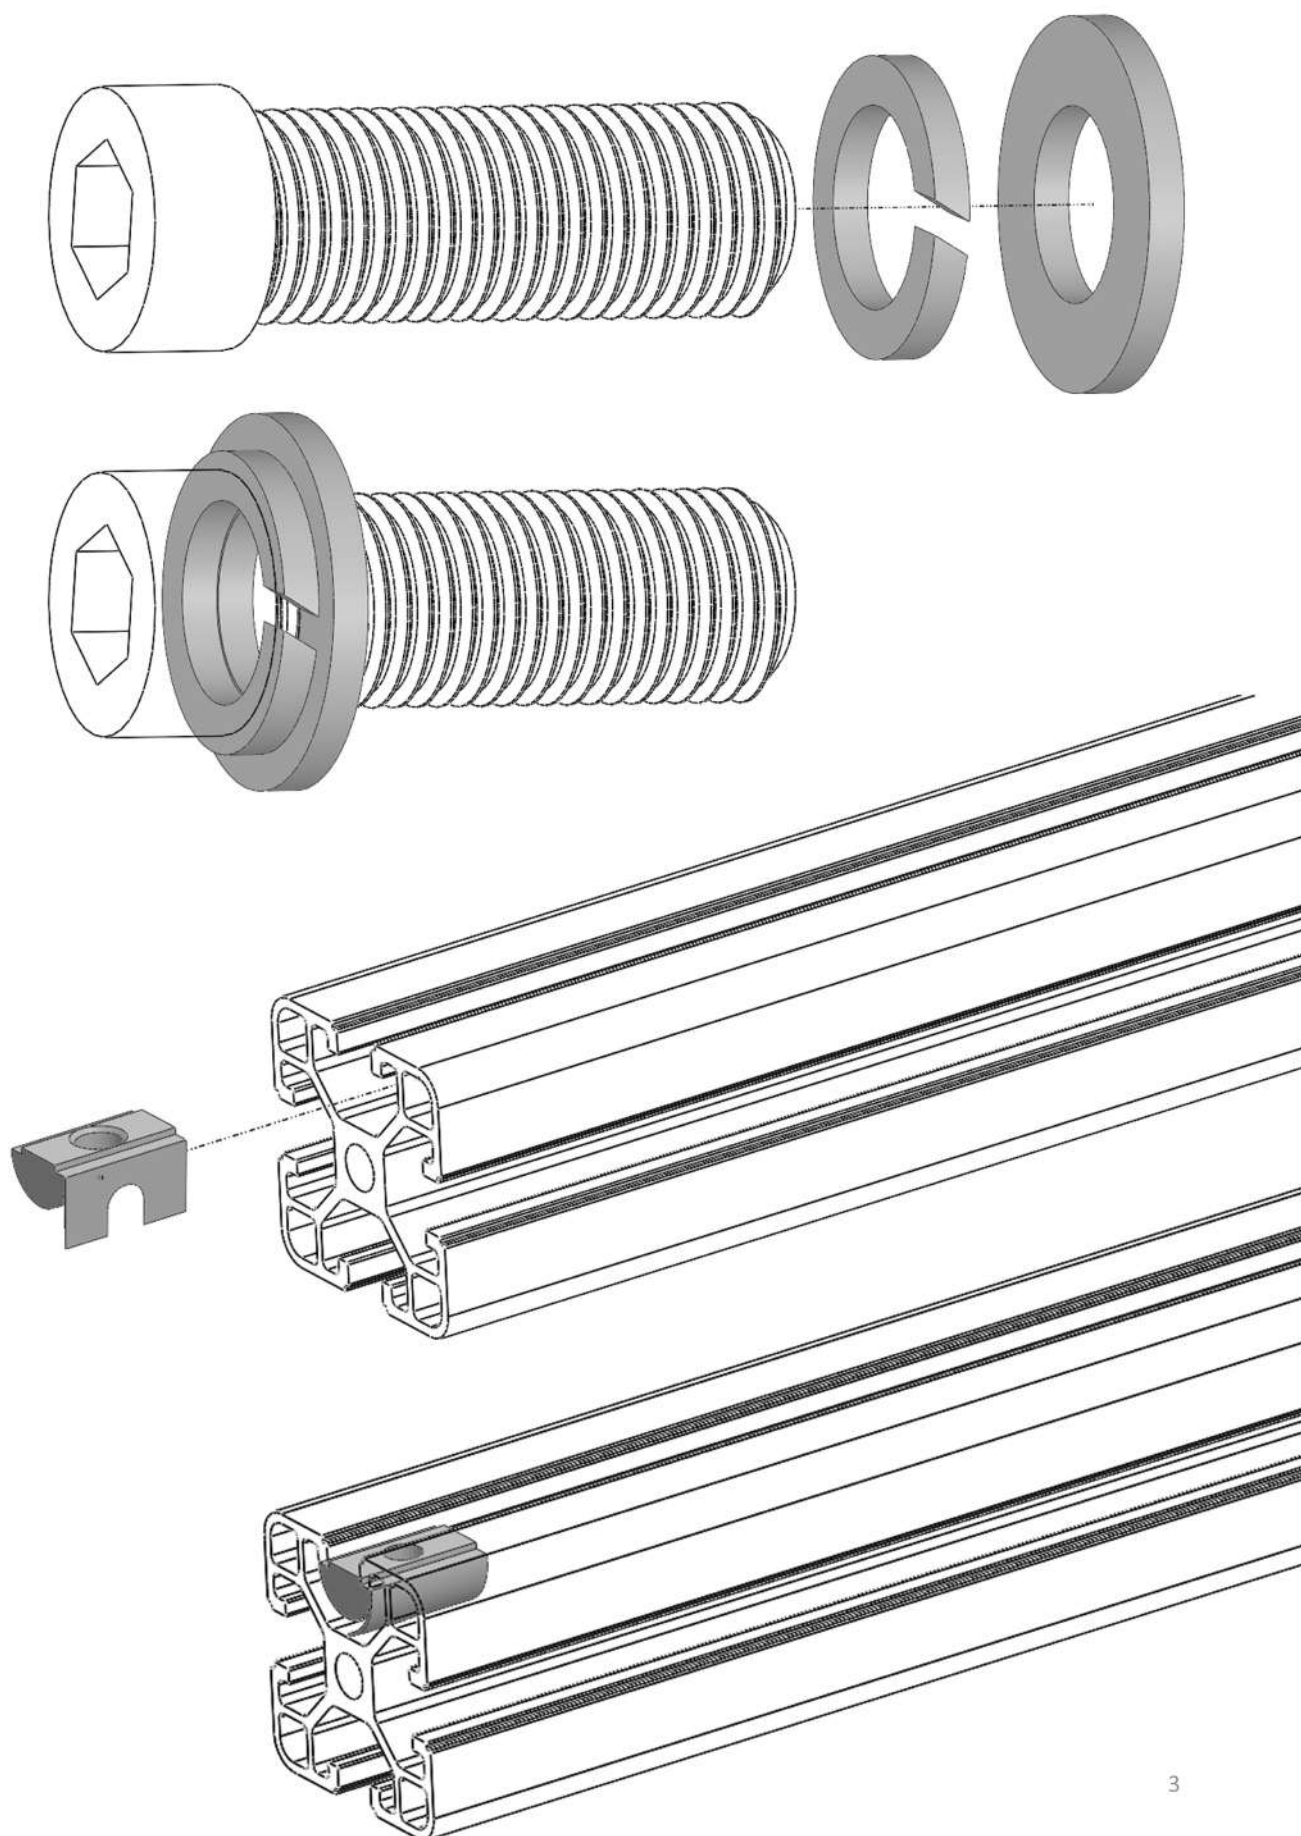


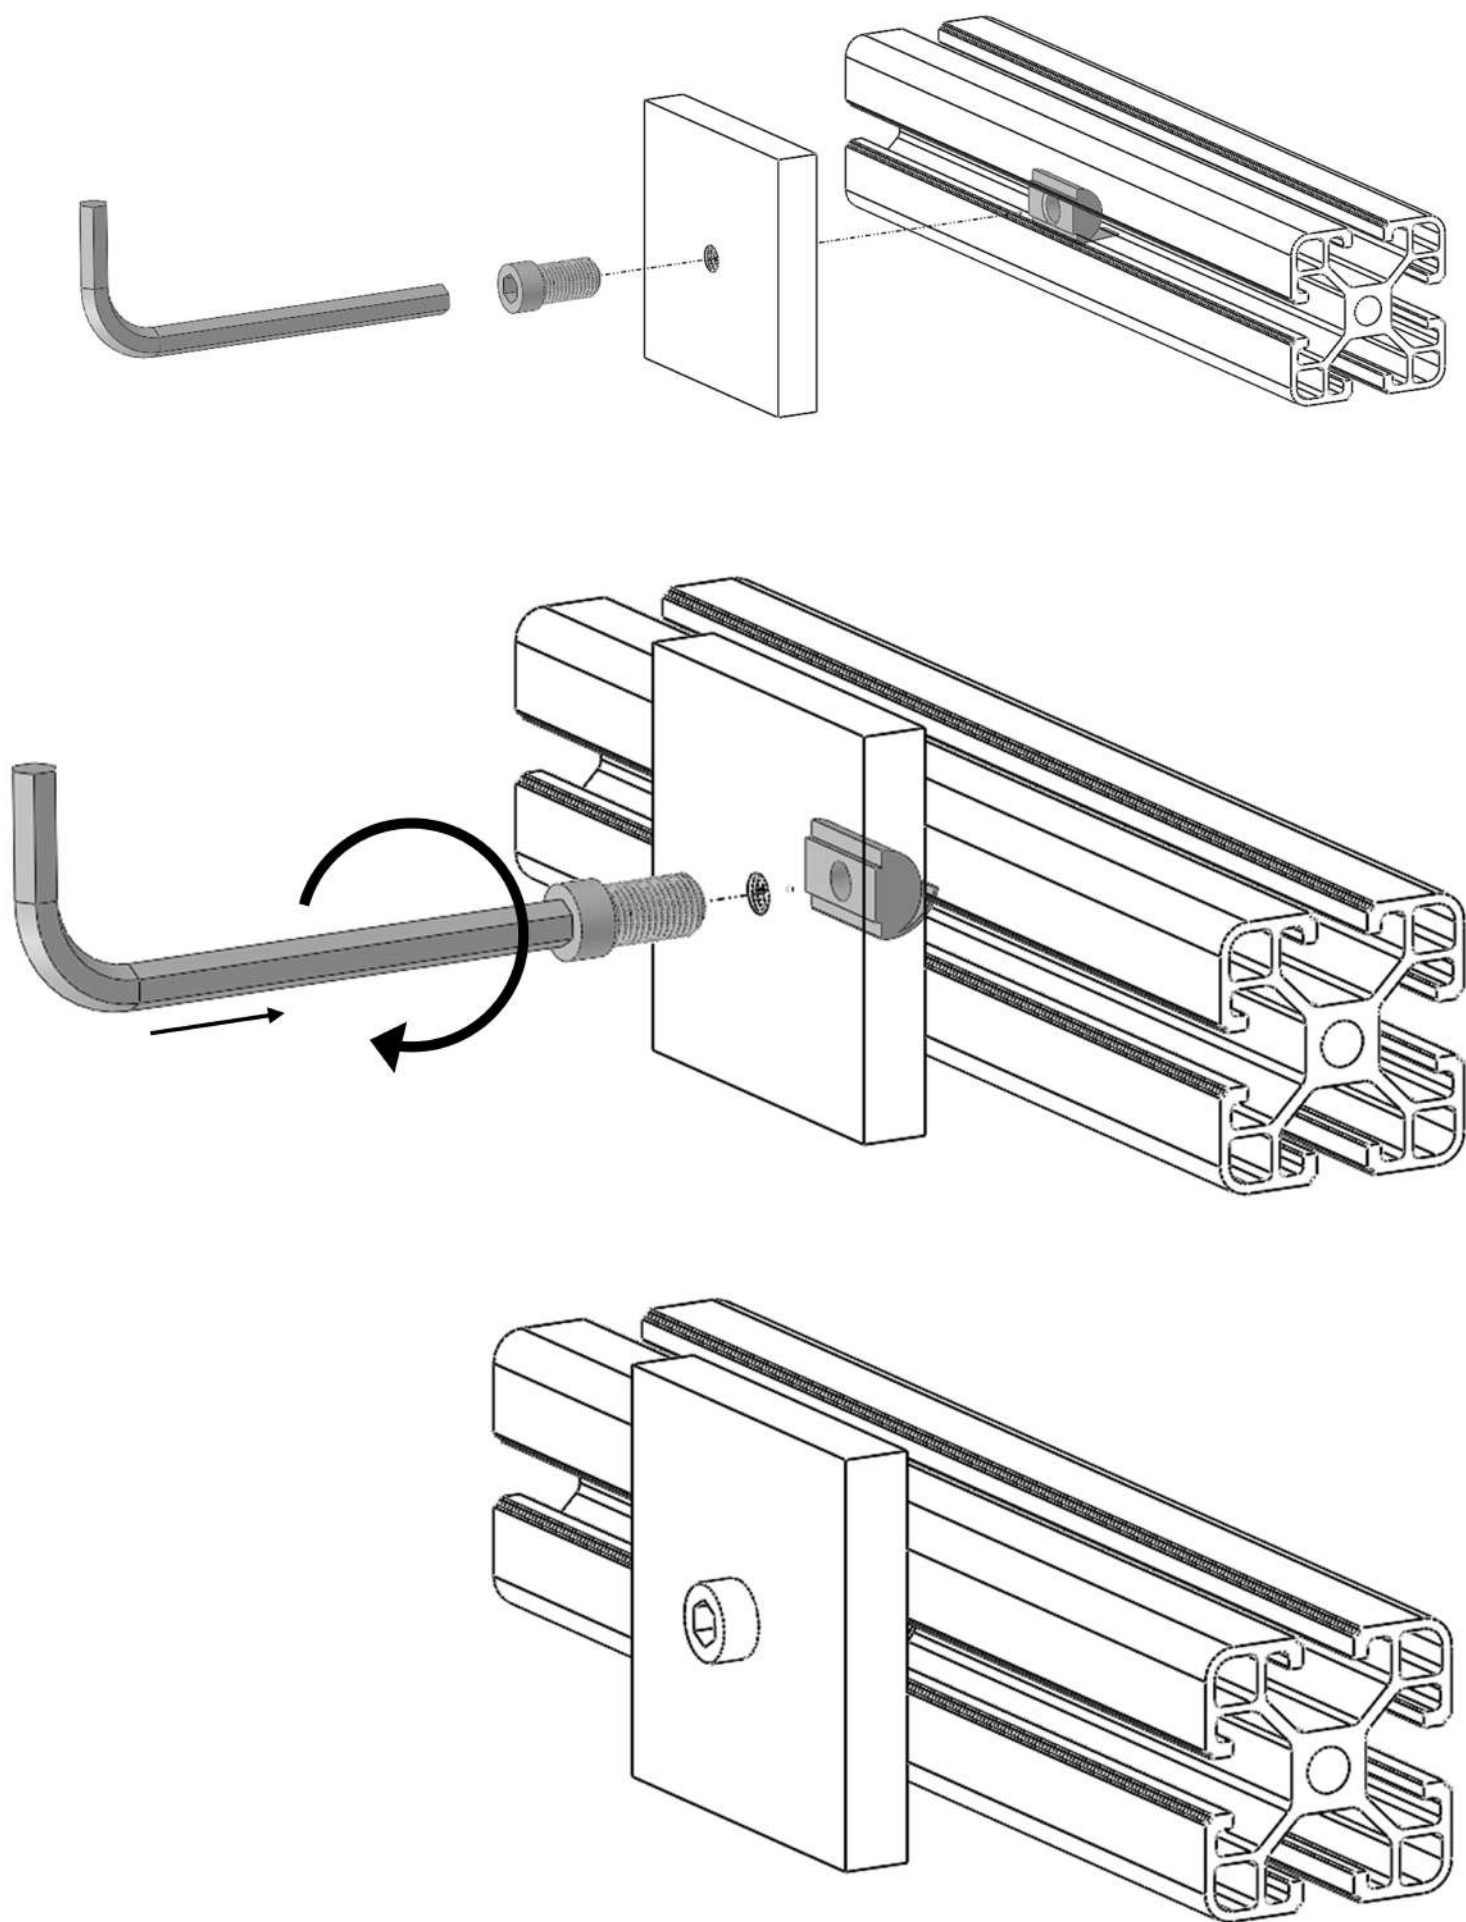


TR80-TMSML3

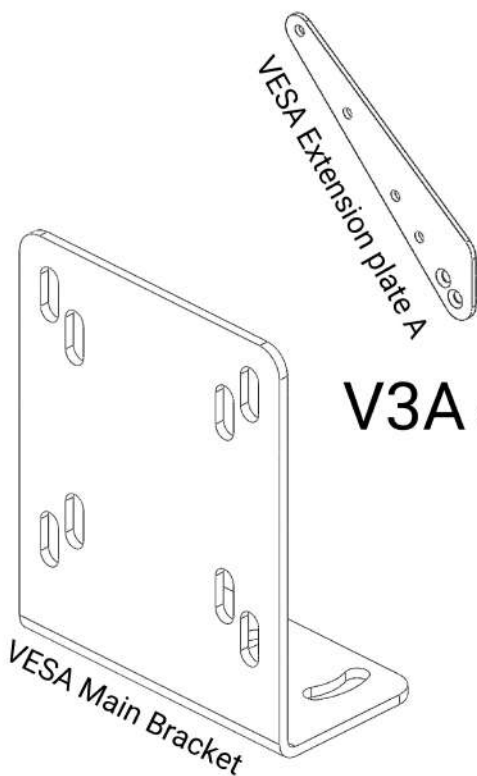


V3 × 1

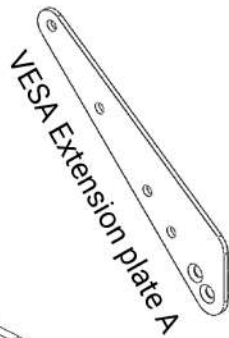


V3A × 2

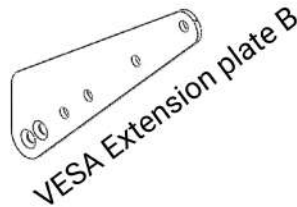

V3B × 2

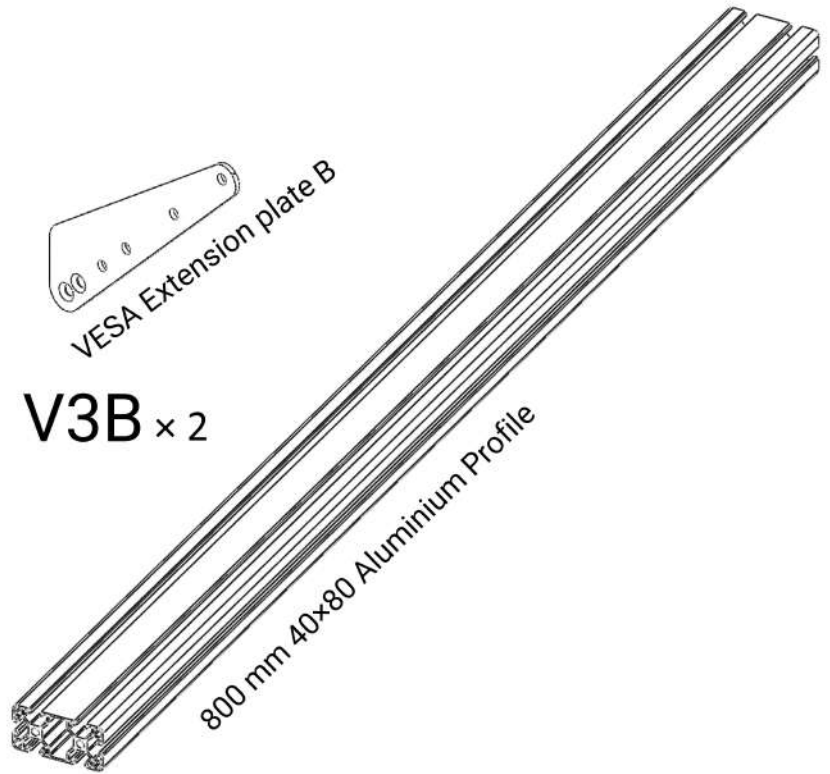


P15 × 1

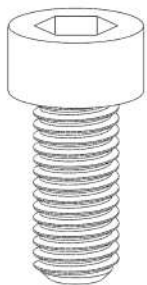


M8x16 Hex Screw

S2 × 8

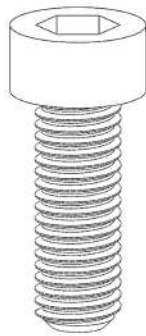


M8x20 Hex Screw

S3 × 3

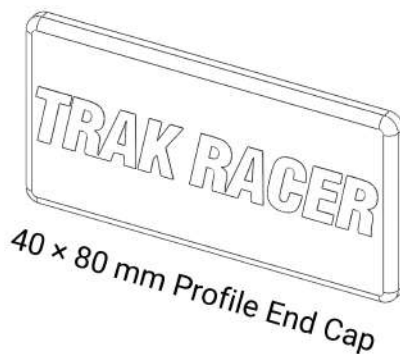

E2 × 2

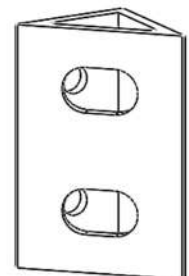


40 x 80 Anodized Corner Bracket

CB4 × 2




M8x16 Flat Screw

S10 × 8

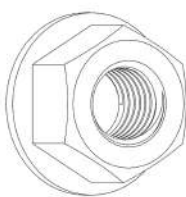


M8 Flange Nut

N1 × 8

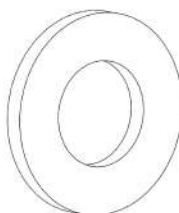


Flat Washer

W1 × 3

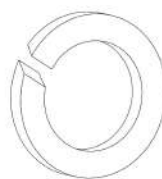

Lock Washer



W2 × 3

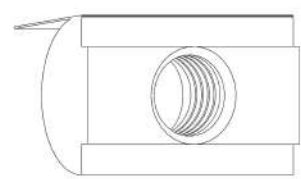

M8 T-Nut



N2 × 11

1

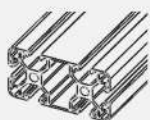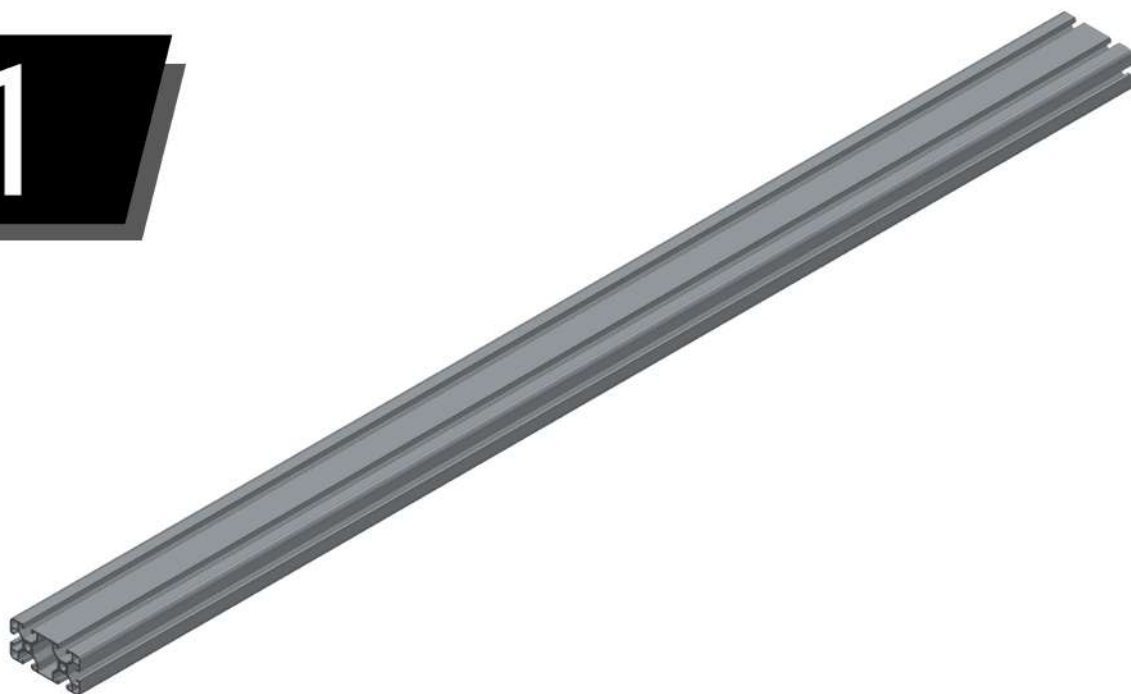


P15x1

1a

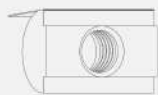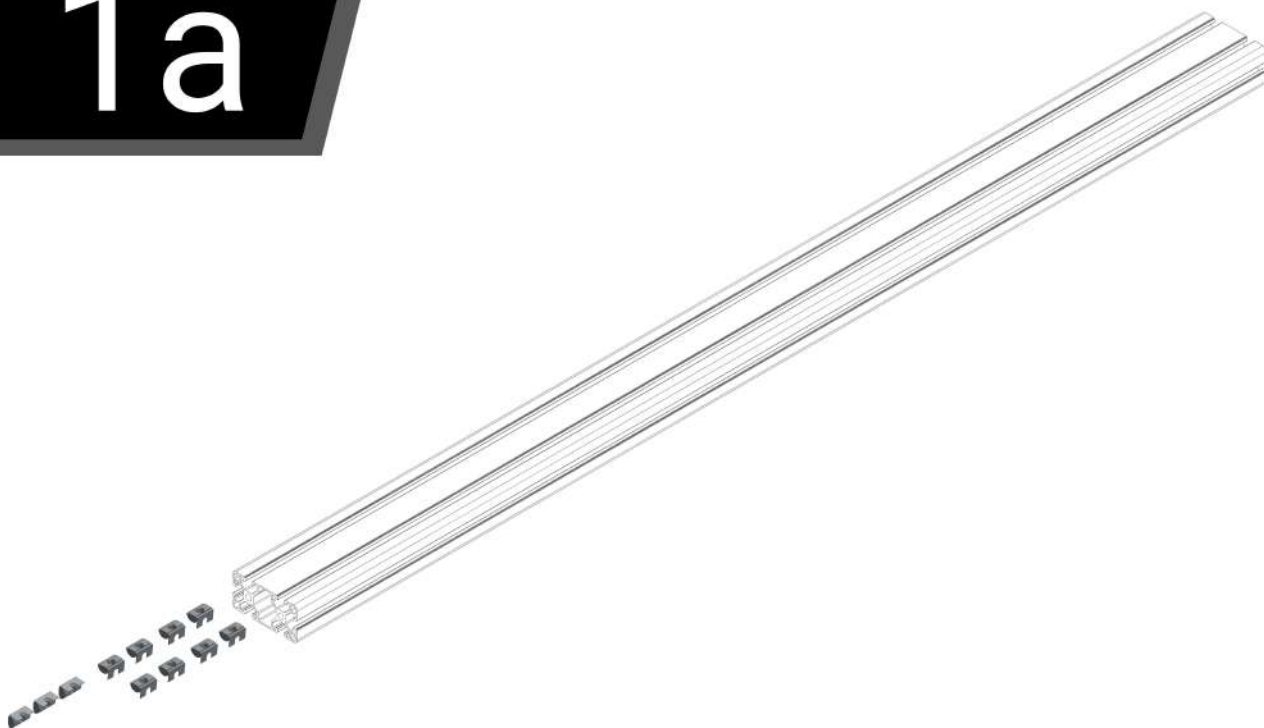


N2x11


1b

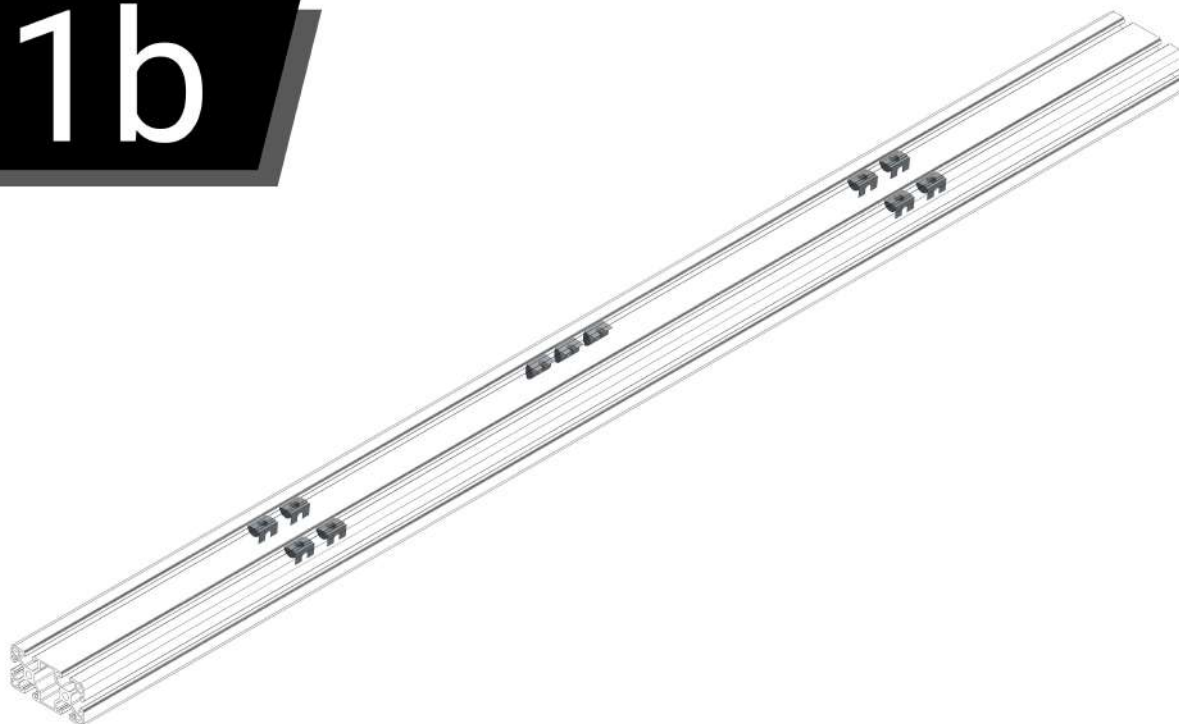


2

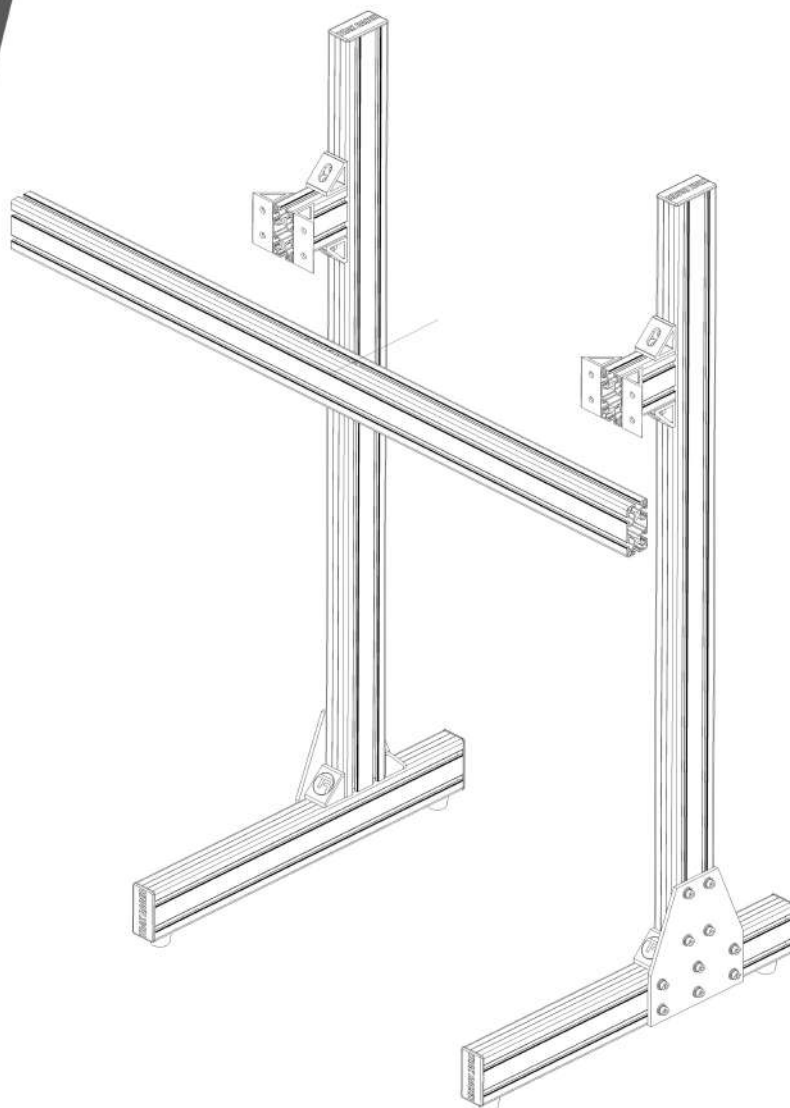

2a

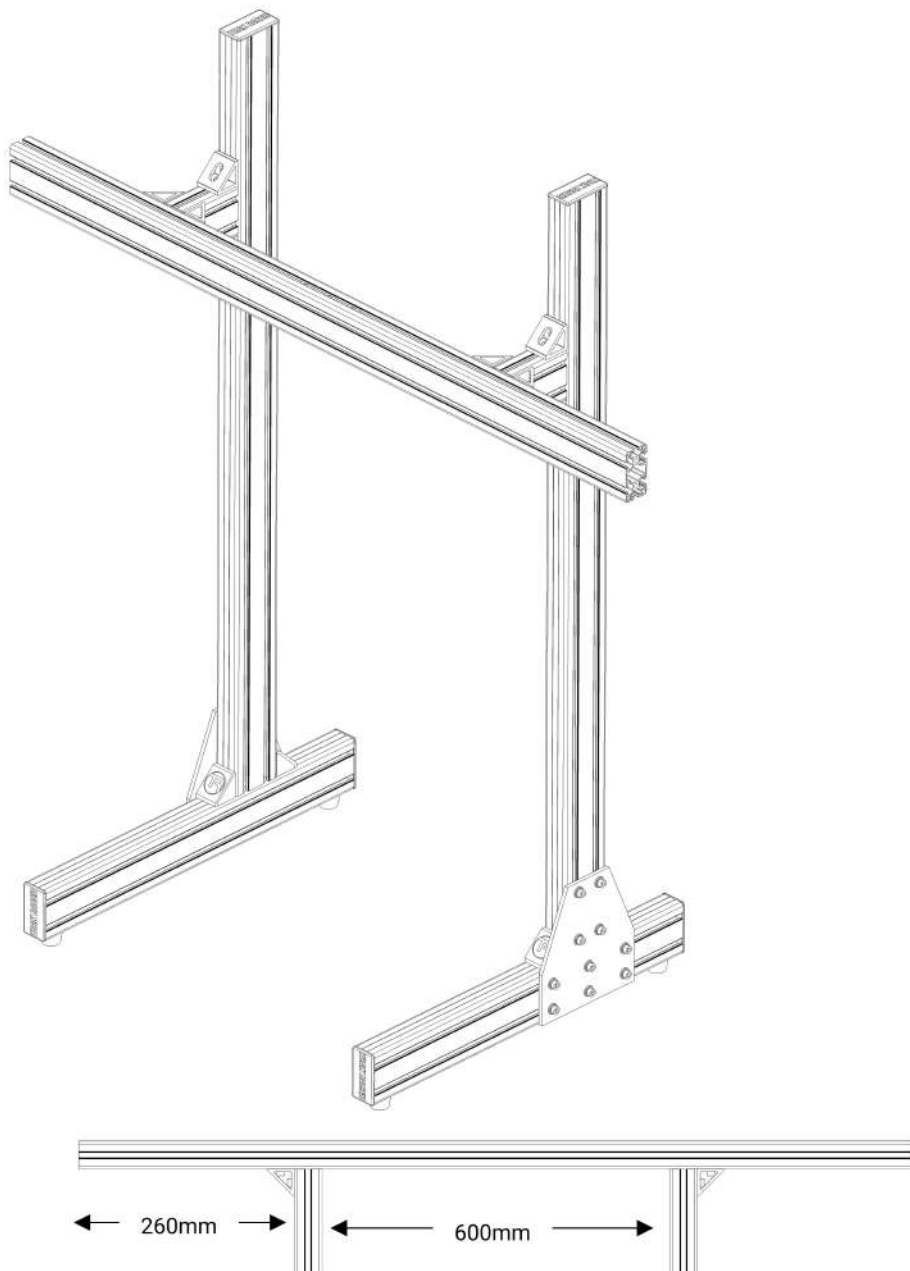


2b

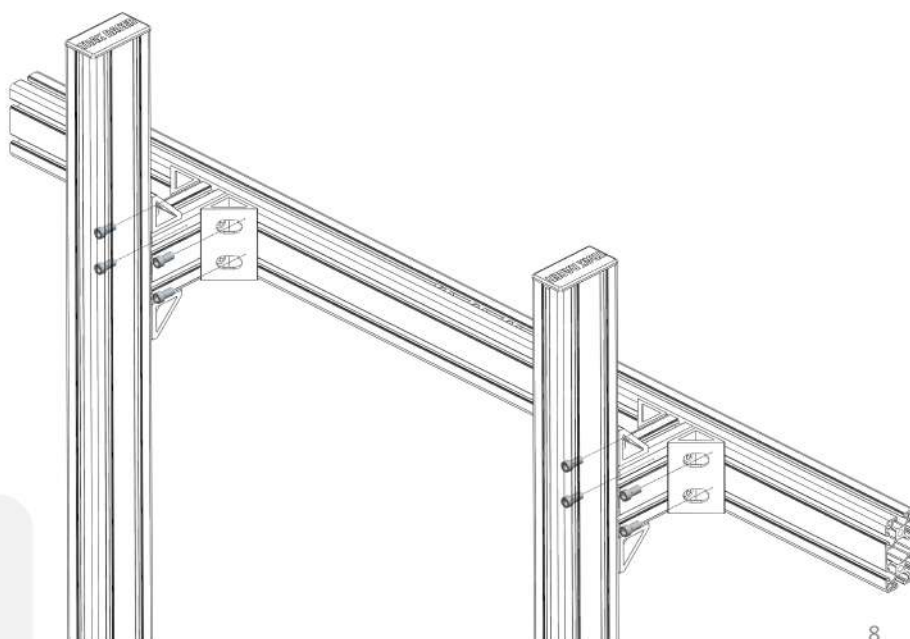



S2x8



2c


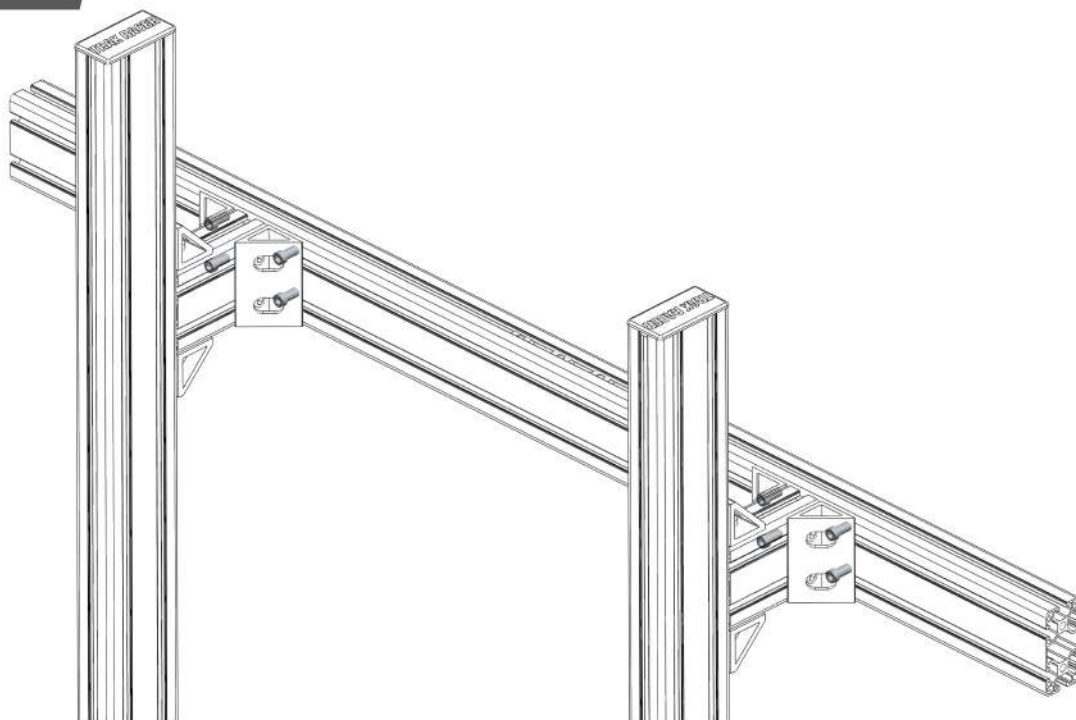


3

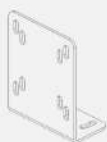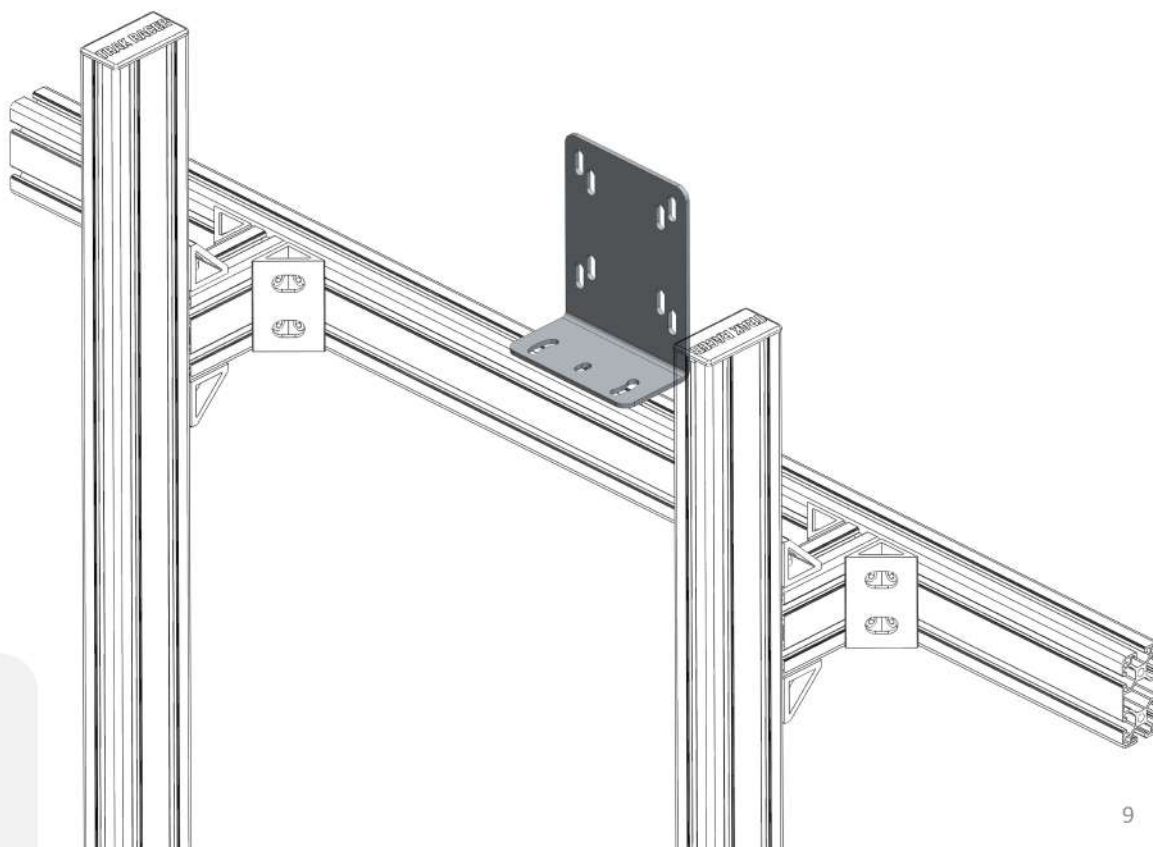


V3x1

3a

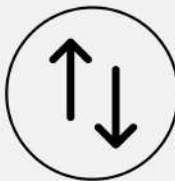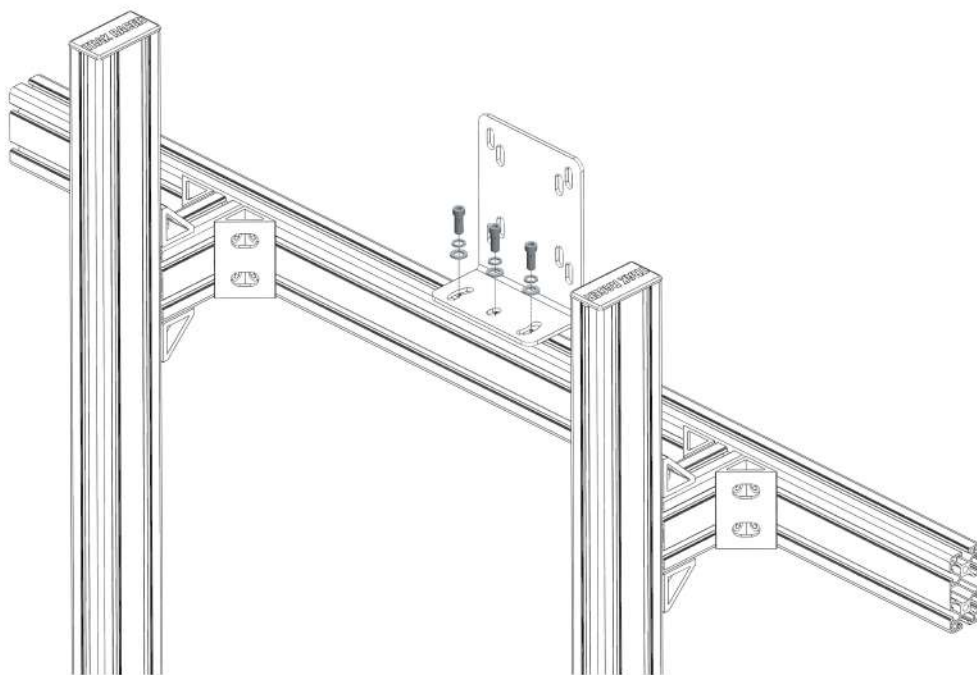

3b

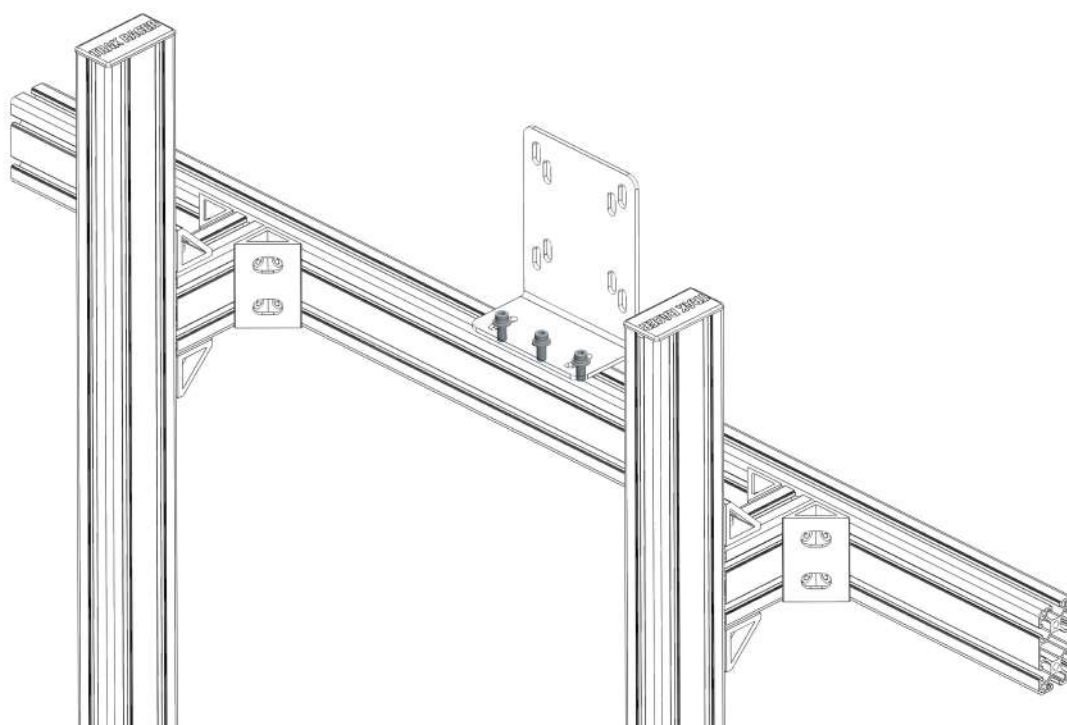

4

TRAK RACER

E3×2

4a Optional

Note: To add a larger monitor follow the below assembly




V3A×2




V3B×2


4b Optional

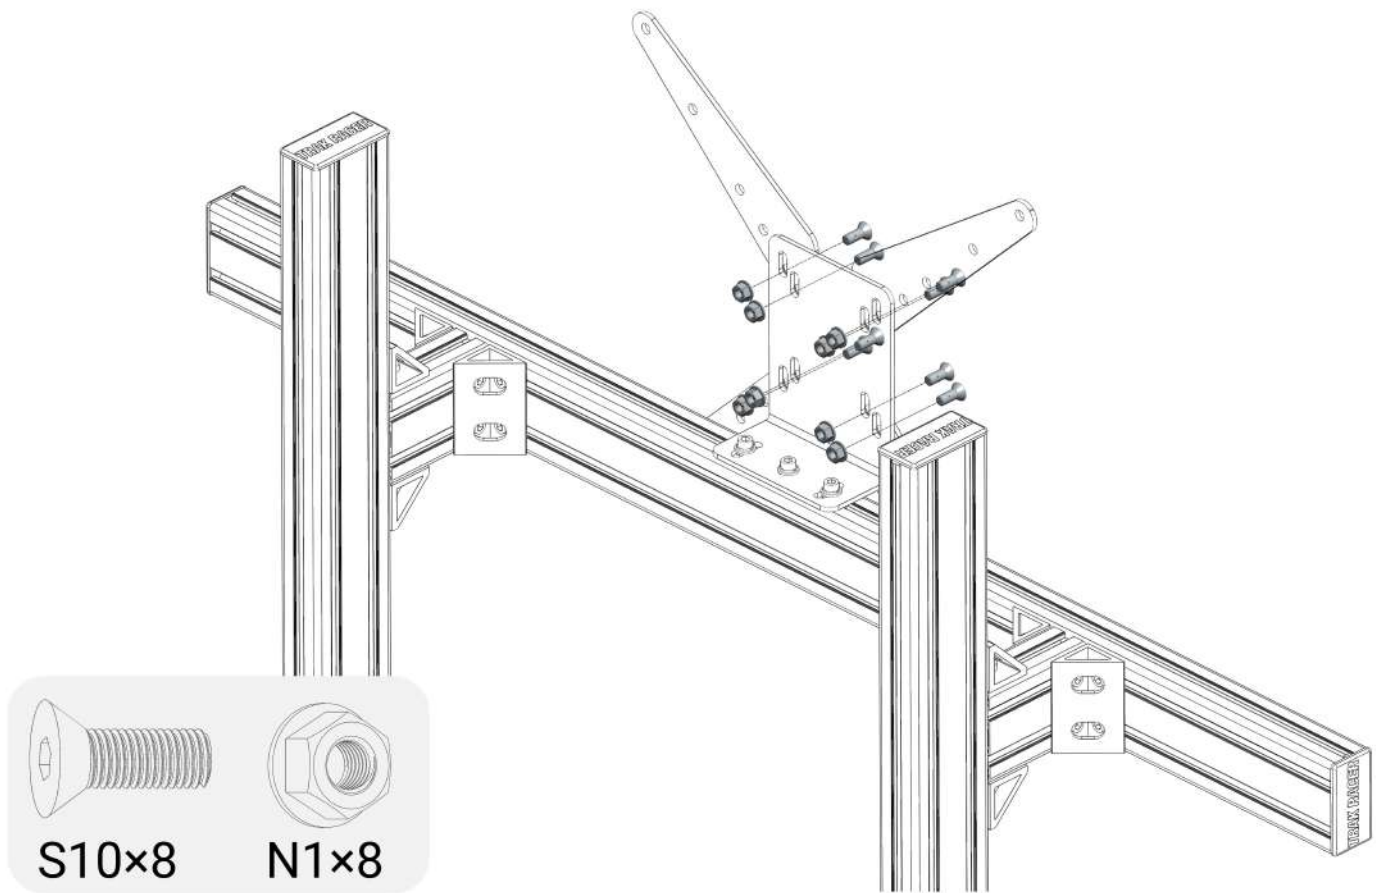


4c Optional

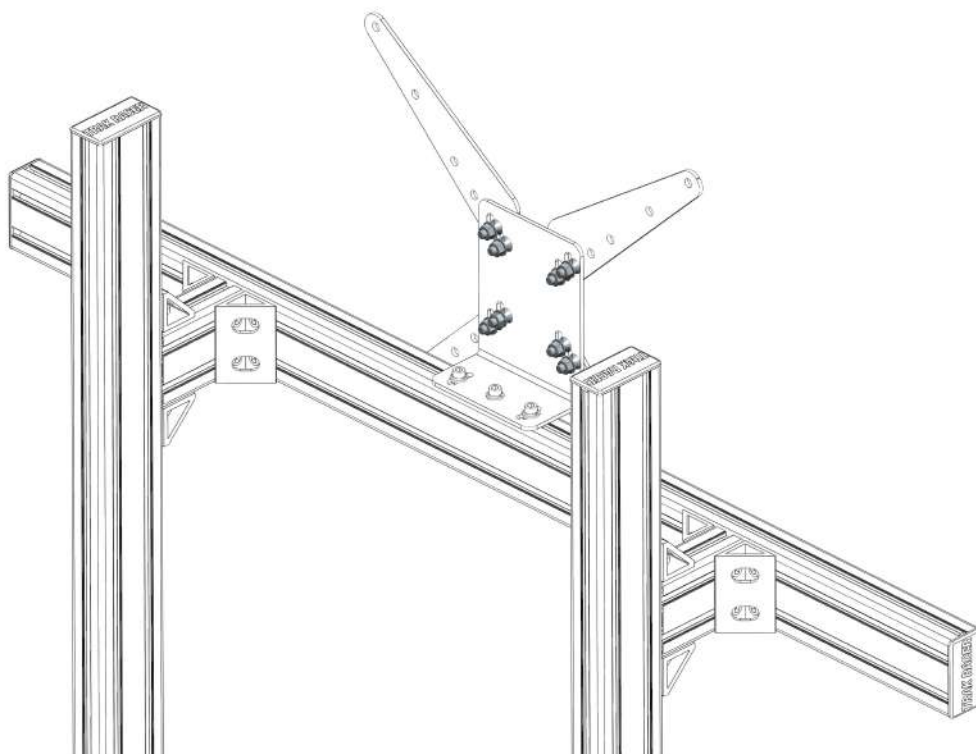


5

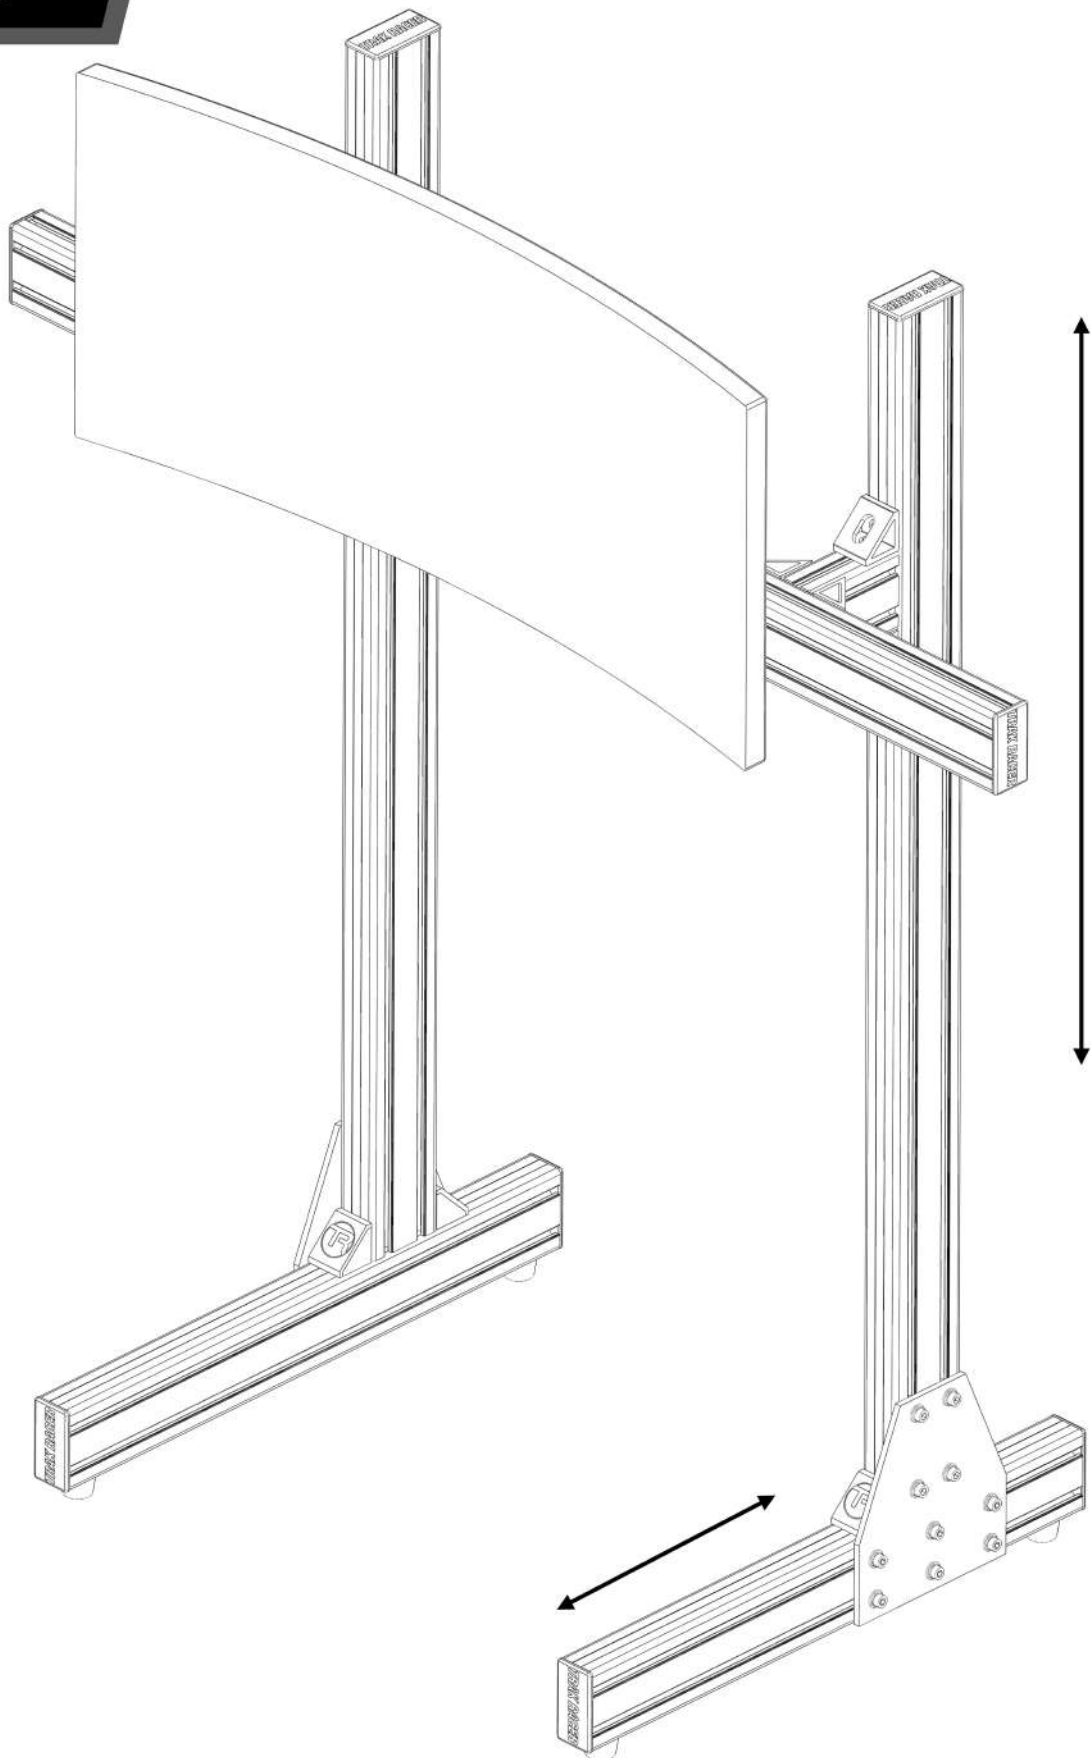

Note: If your monitor screw size is under 8mm you will need to use washers to mount monitor (not supplied). Make Adjustment and tighten hardware.

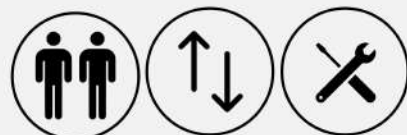

FINISHED

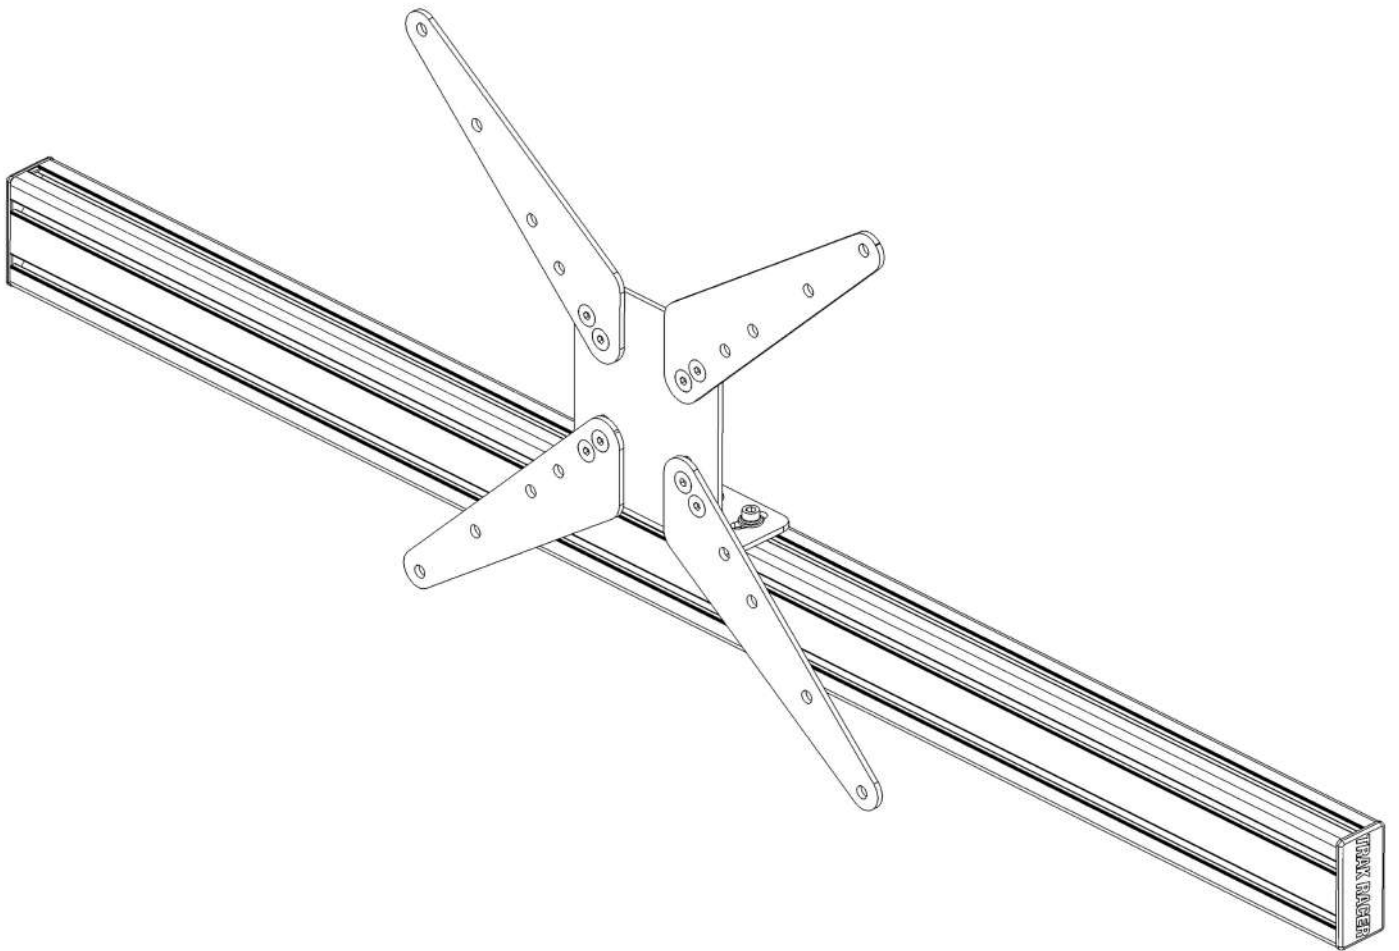

Share your build online and tag us to be featured!



@trakracer



@trakracer



@trak_racer