


Tablet Holder GEN 2

Assembly Guide

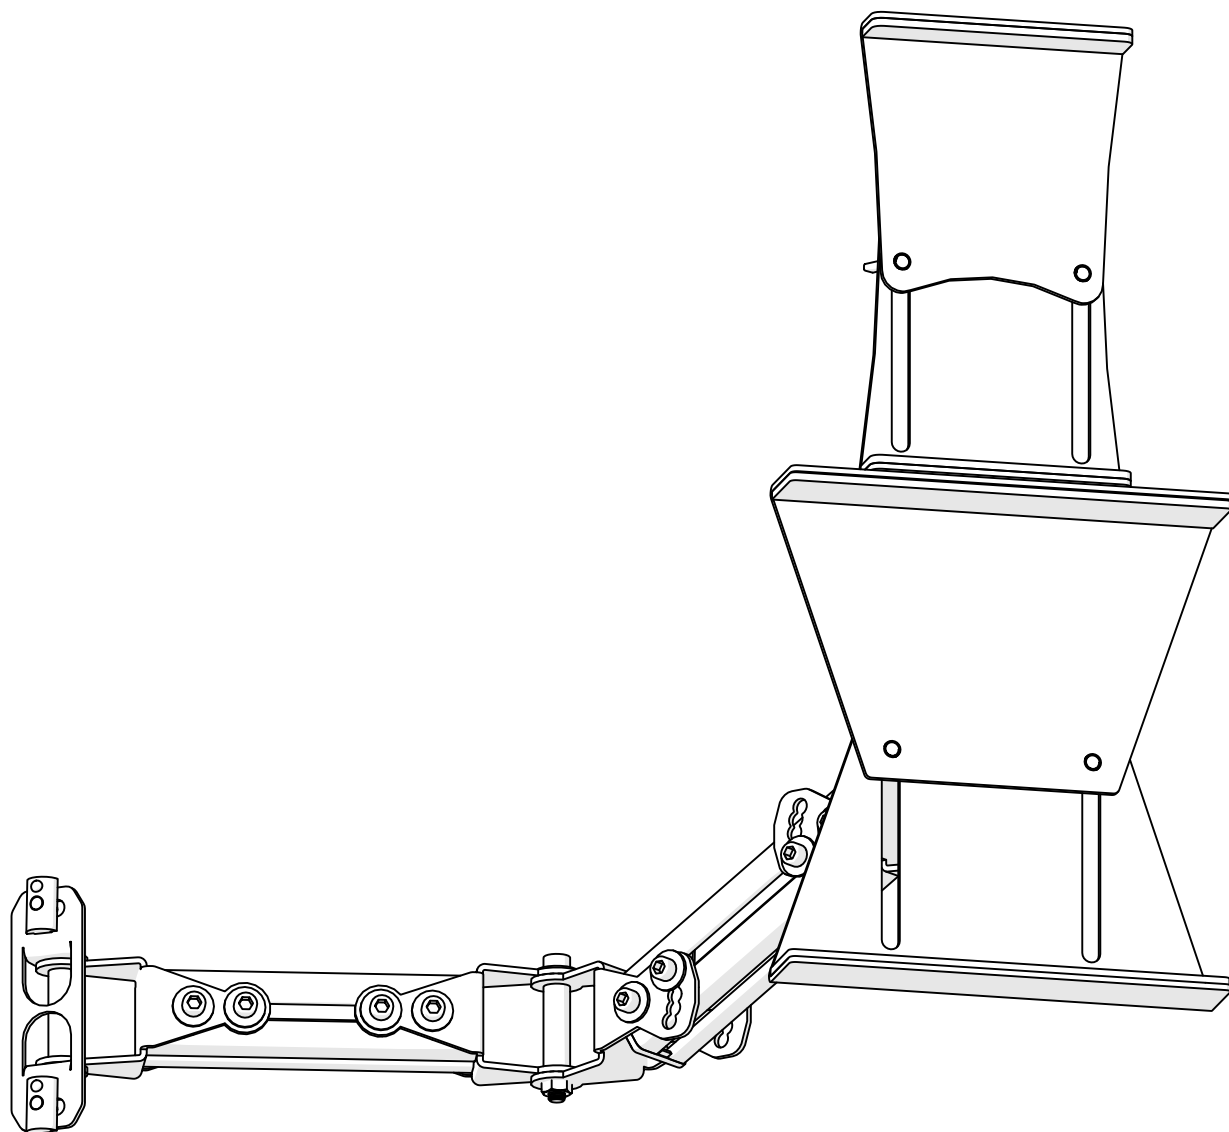

IMPORTANT: Different regions may have different models. Please ensure the part number below matches that on your product's box.

TR80-TSHX



TRAK RACER

Published 2024-9-30

TABLE OF CONTENTS

3 Symbol Legend

4 Part List

5 Assembly Notes

7 Assembly Instructions



IMPORTANT: Since there are different versions of each product based on your region, please make sure you are using the correct set of instructions. The part number below should match the one on your box.



IMPORTANT: Due to the nature of cut aluminum profiles, some metal shavings may remain despite our thorough QA cleaning process. We recommend opening boxes and packaging on a hard surface.



NOTE: Some screws and washers may be pre-installed. These are included in the parts list and will need to be loosened and reattached according to the instructions.




Recommended: Two people for the task



Tighten the hardware



Keep the hardware loose for adjustments



Make the necessary adjustments



Break the tab off the corner bracket



Safety glasses required



Attention/Priority needed




Reserve for the next step




Mirrored components (same on both sides)

PART LISTS

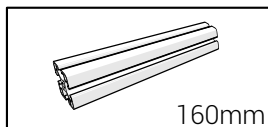


Aluminum Profile

TR-8040-160 x2

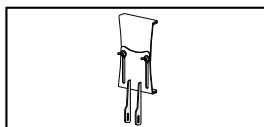


Phone Holder

PH-1 x1

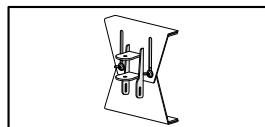


Tablet Holder

TH-1 x1

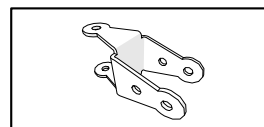


Fixed Bracket-1

FB-1 x2

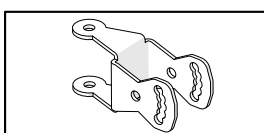


Fixed Bracket-2

FB-2 x2

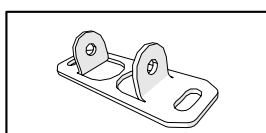


Fixed Adjustment Plate

FAP x1

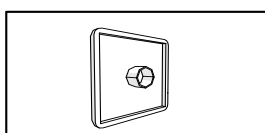


End Cap, 40x40

EC-40 x2

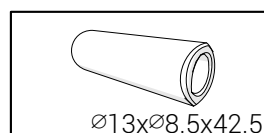


Short Fixed Rod

SFR-39.5 x1

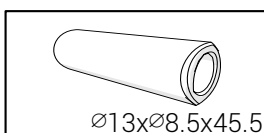


Short Fixed Rod

SFR-45.5 x2

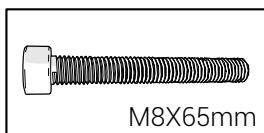


Screw (Hex)

SH-M8-65 x1

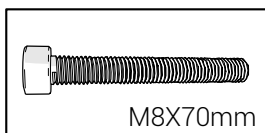


Screw (Hex)

SH-M8-70 x2

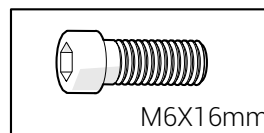


Screw (Hex)

SH-M6-16 x2

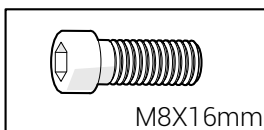


Screw (Hex)

SH-M8-16 x18

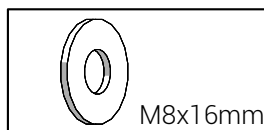


Washer (Flat)

WF-M8-16 x2

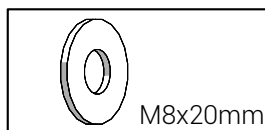


Washer (Flat)

WF-M8-20 x21

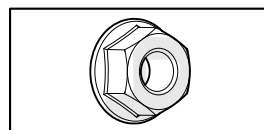


Flange Nut, M8

NF-M8 x3

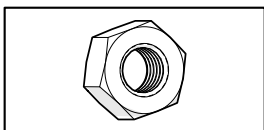

Nut, M6


NL-M6 x2

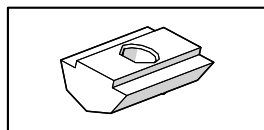


Ball Bearing Nut, M8

NS-M8 x18


NOTE

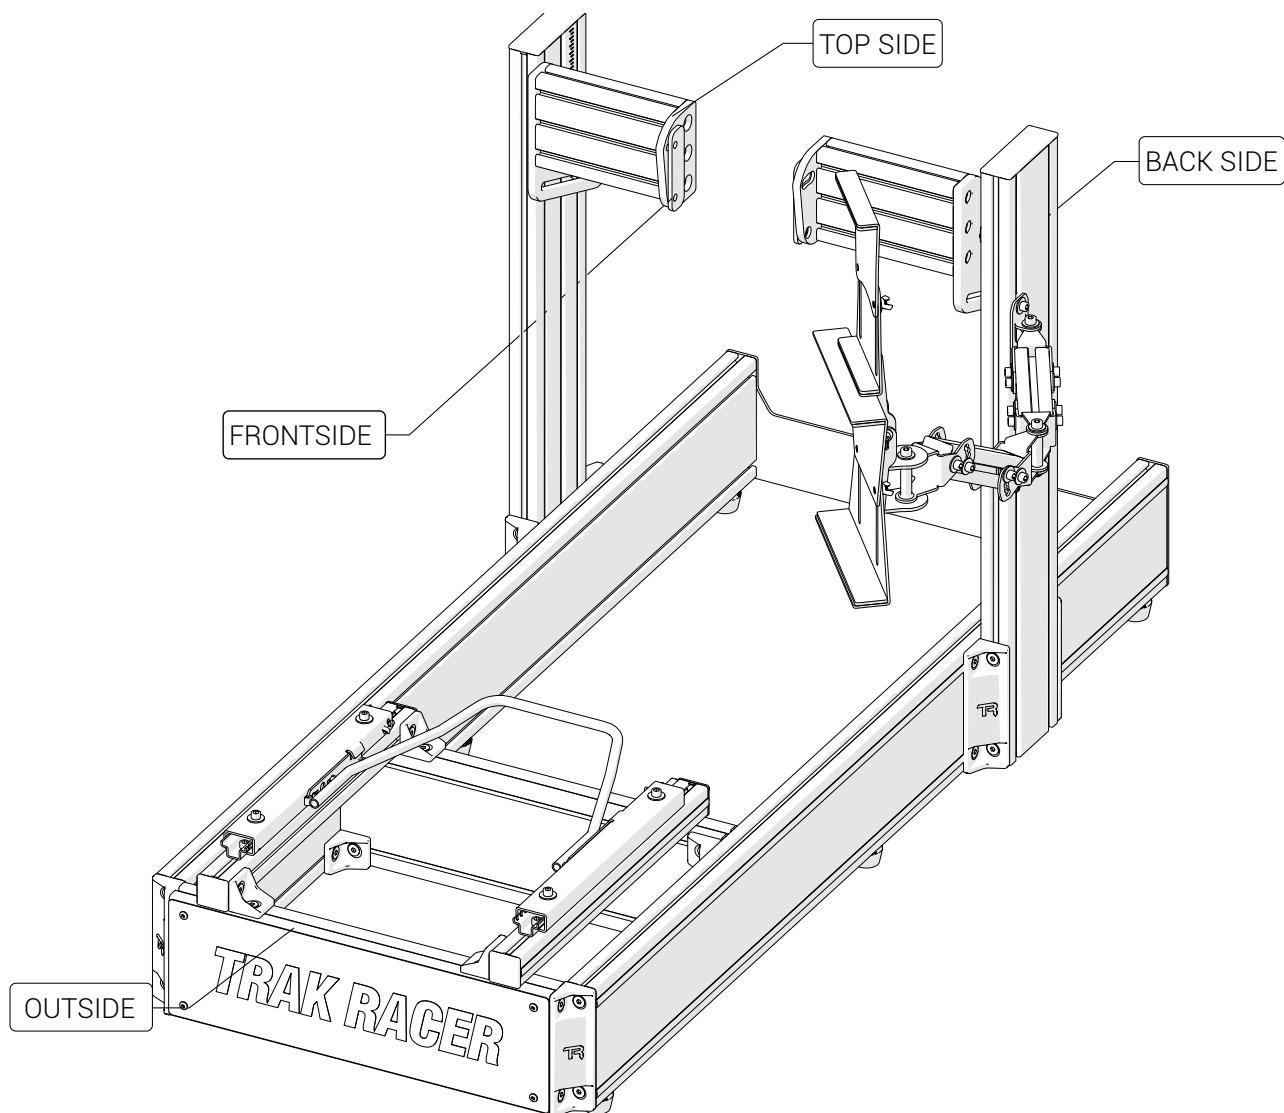

INSTALLATION ORDER FOR SCREWS & WASHERS

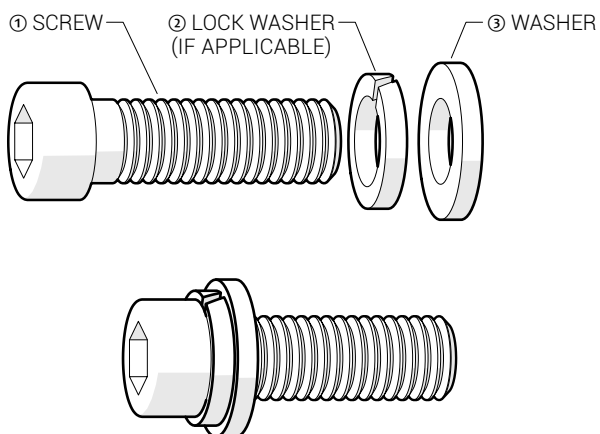


HOW TO MEASURE SCREWS

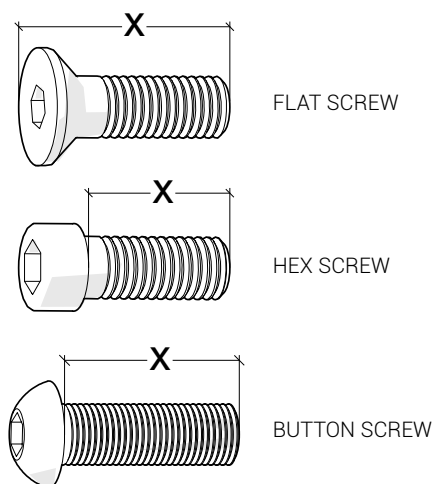

NOTE

NS-M8 & NS-M6



Slide T-Nuts into the ends of the profiles. Some must be added early, so follow the steps in this manual carefully.

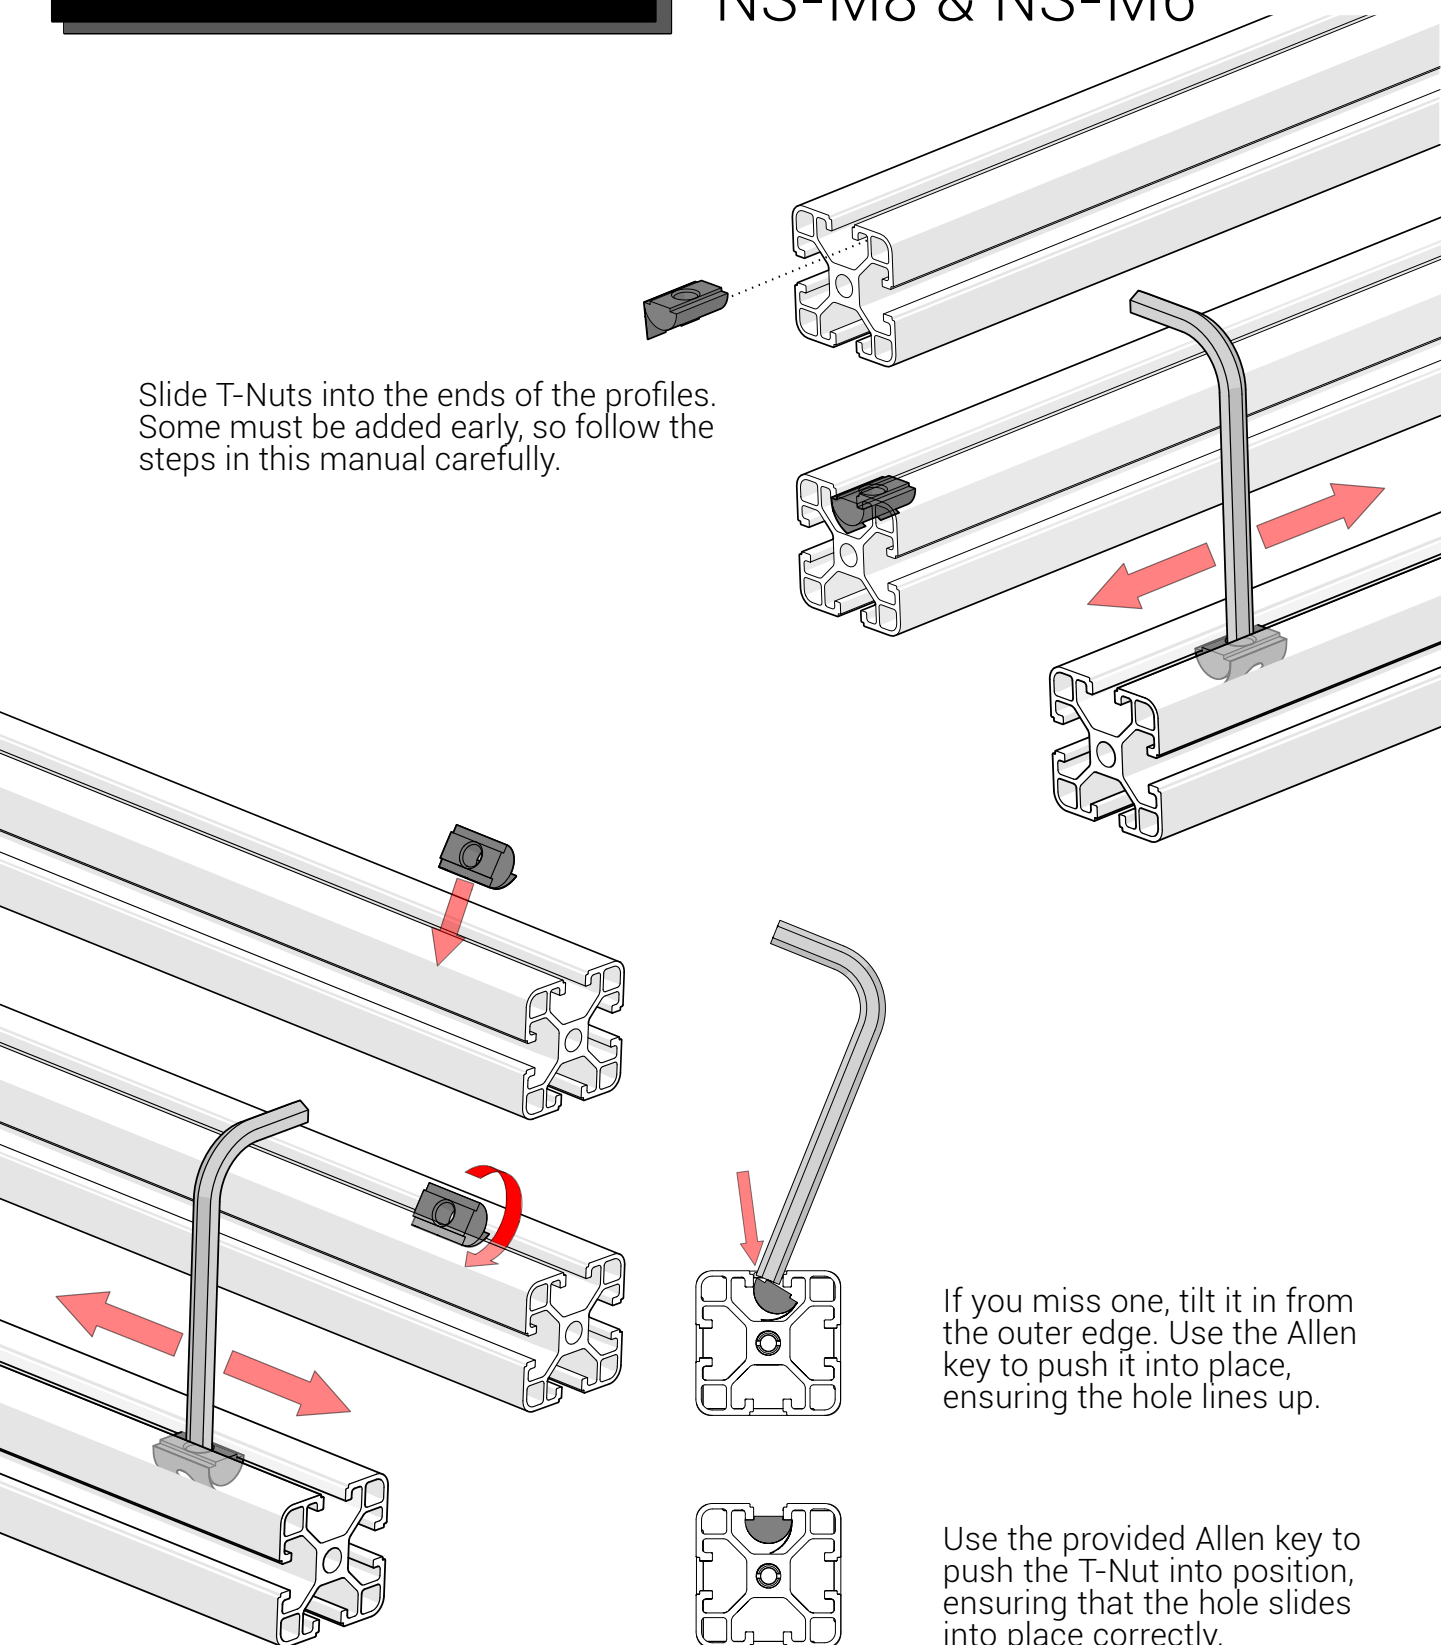



If you miss one, tilt it in from the outer edge. Use the Allen key to push it into place, ensuring the hole lines up.

Use the provided Allen key to push the T-Nut into position, ensuring that the hole slides into place correctly.







1

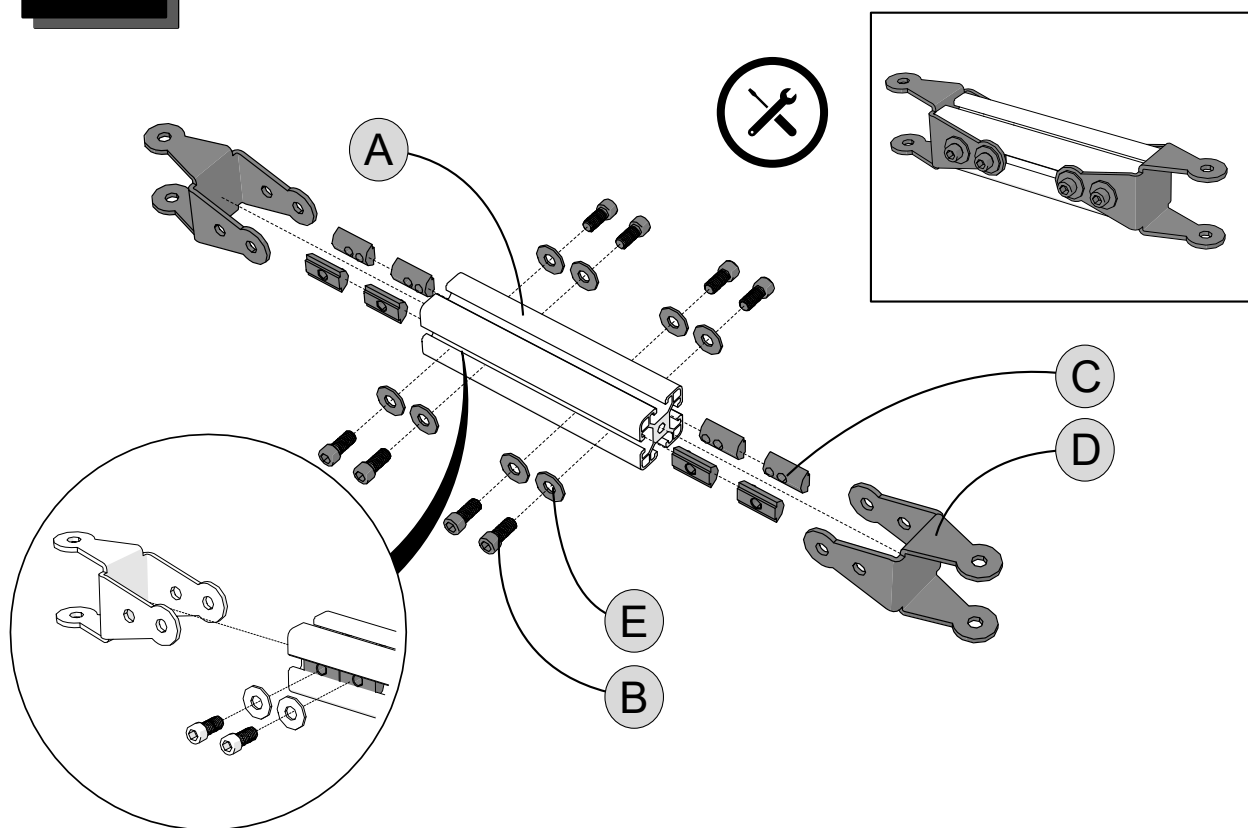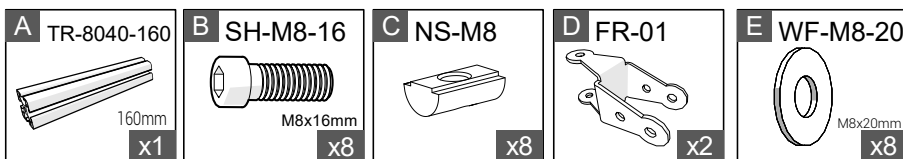

2





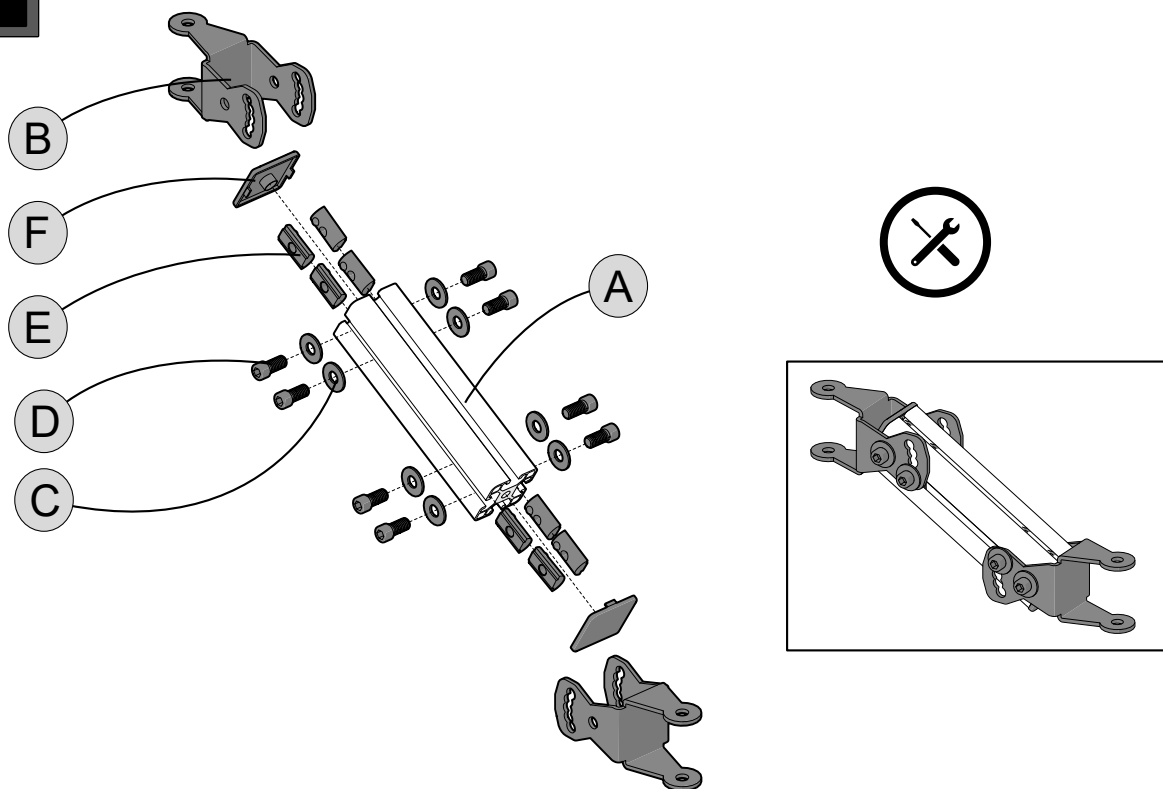
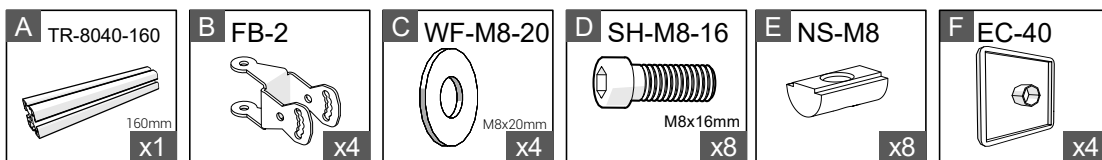


3

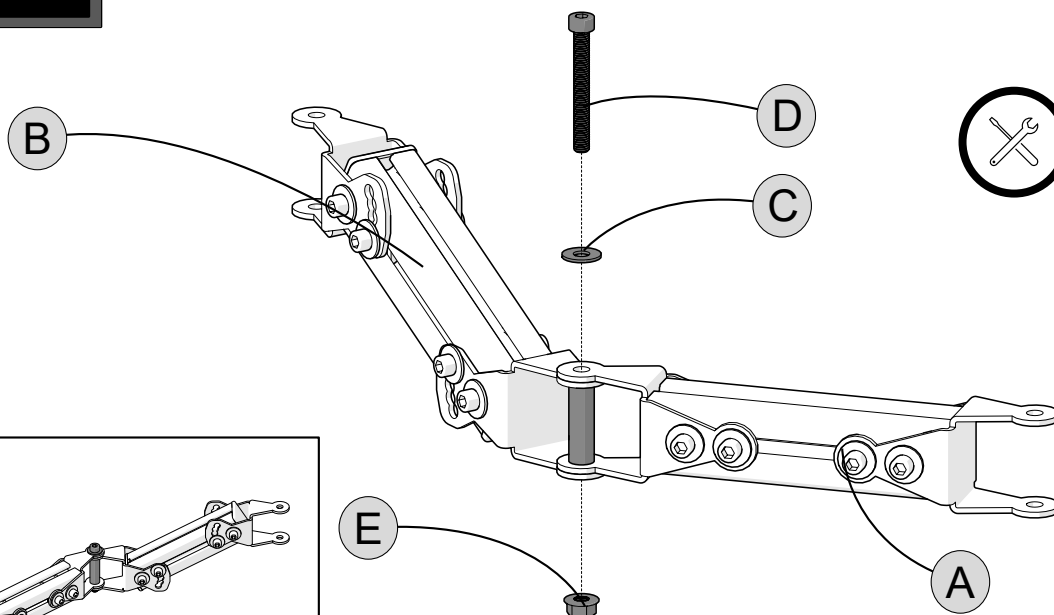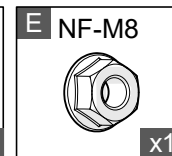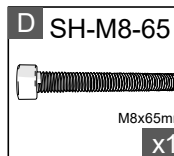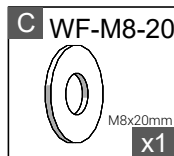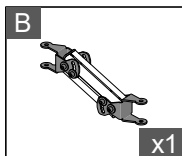
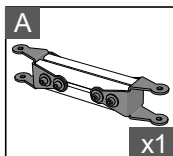


Attach parts from step 1 to step 2.



4

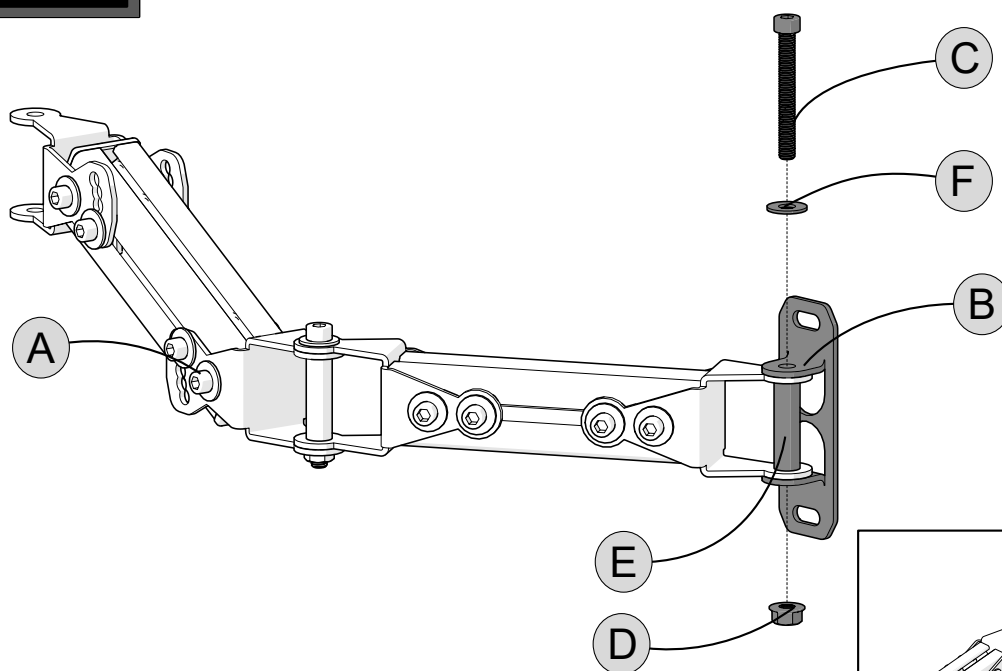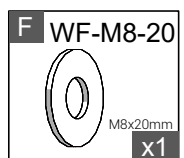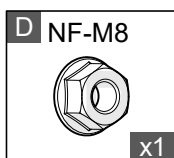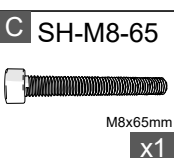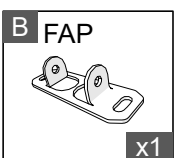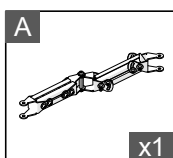







5

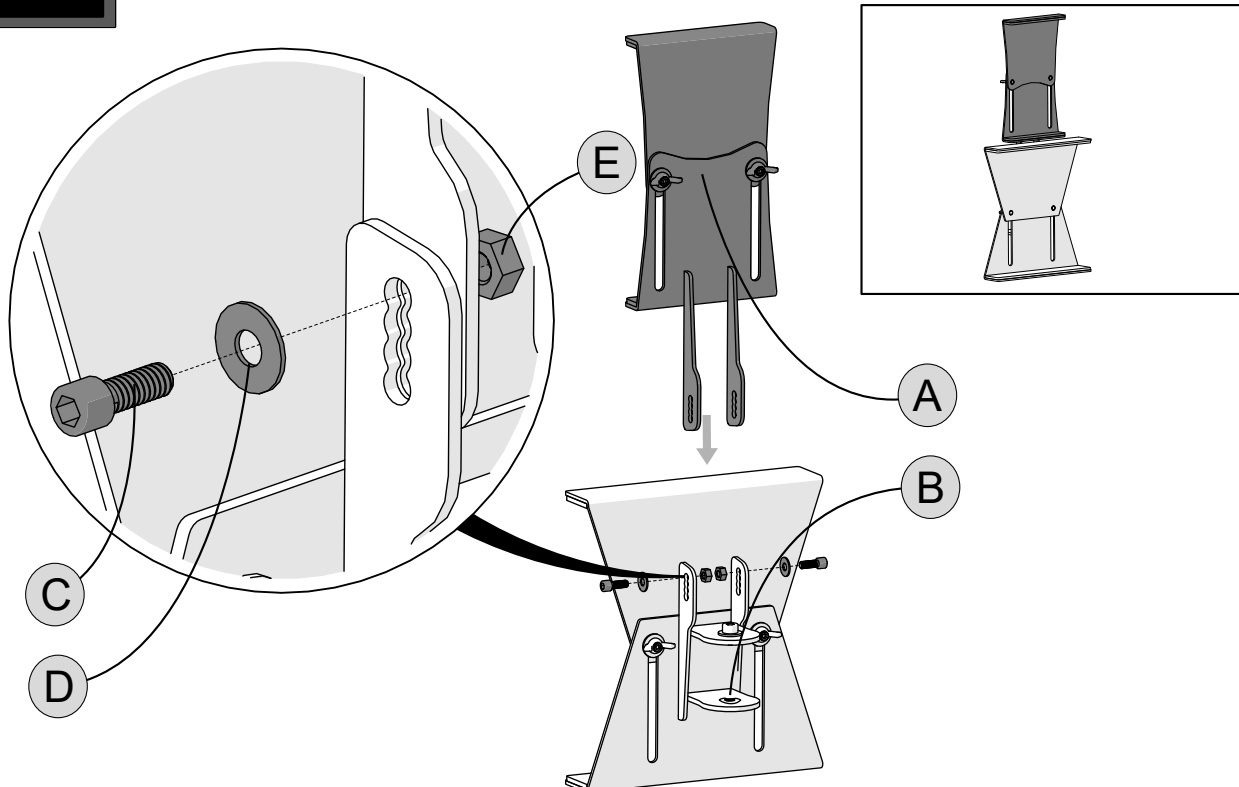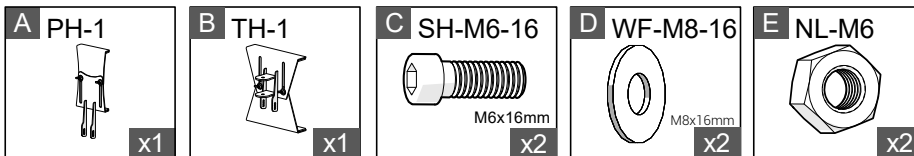


6

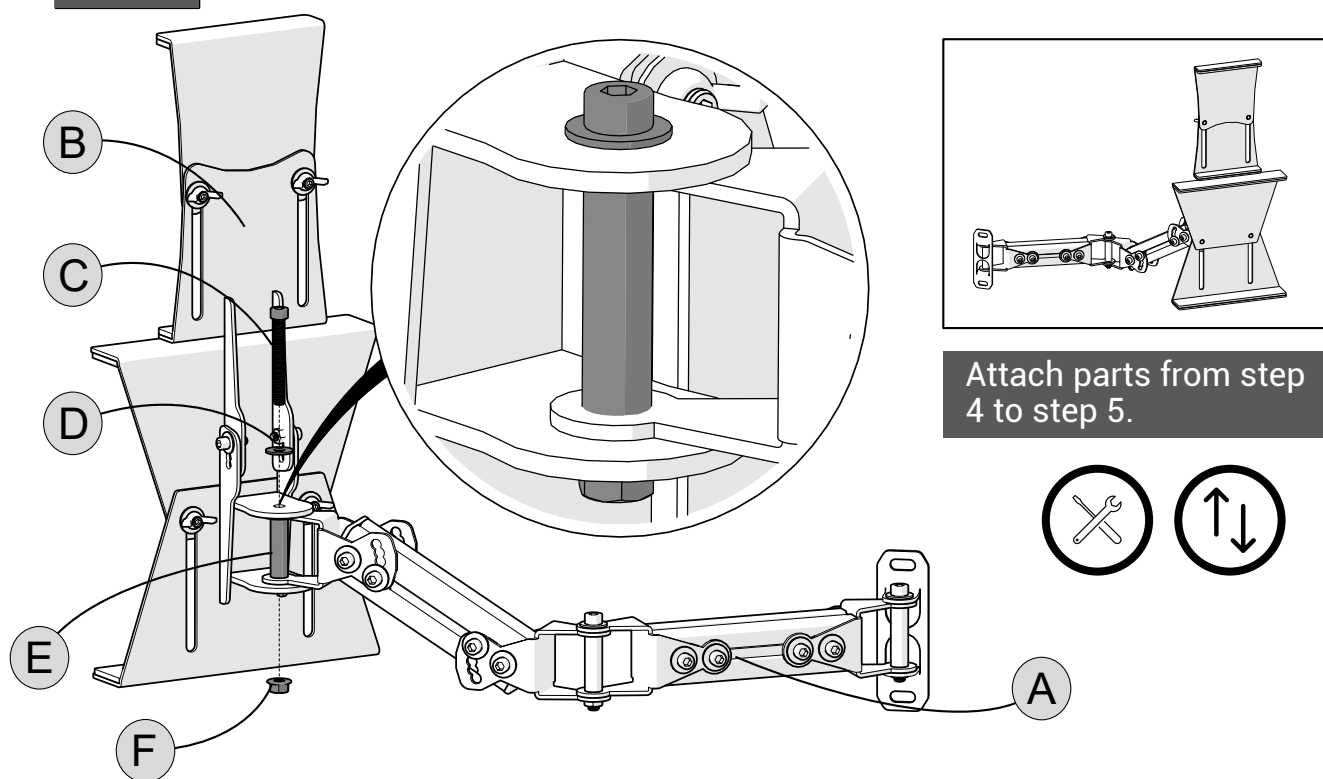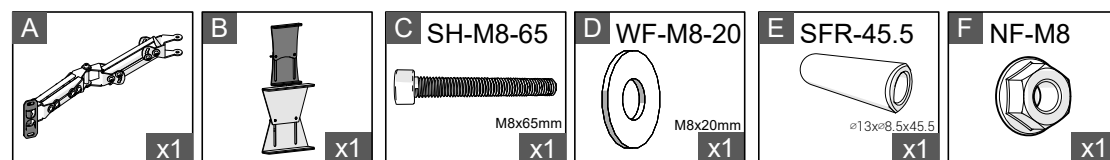

7

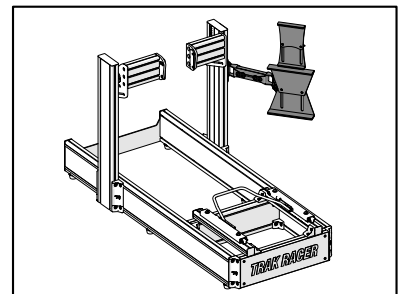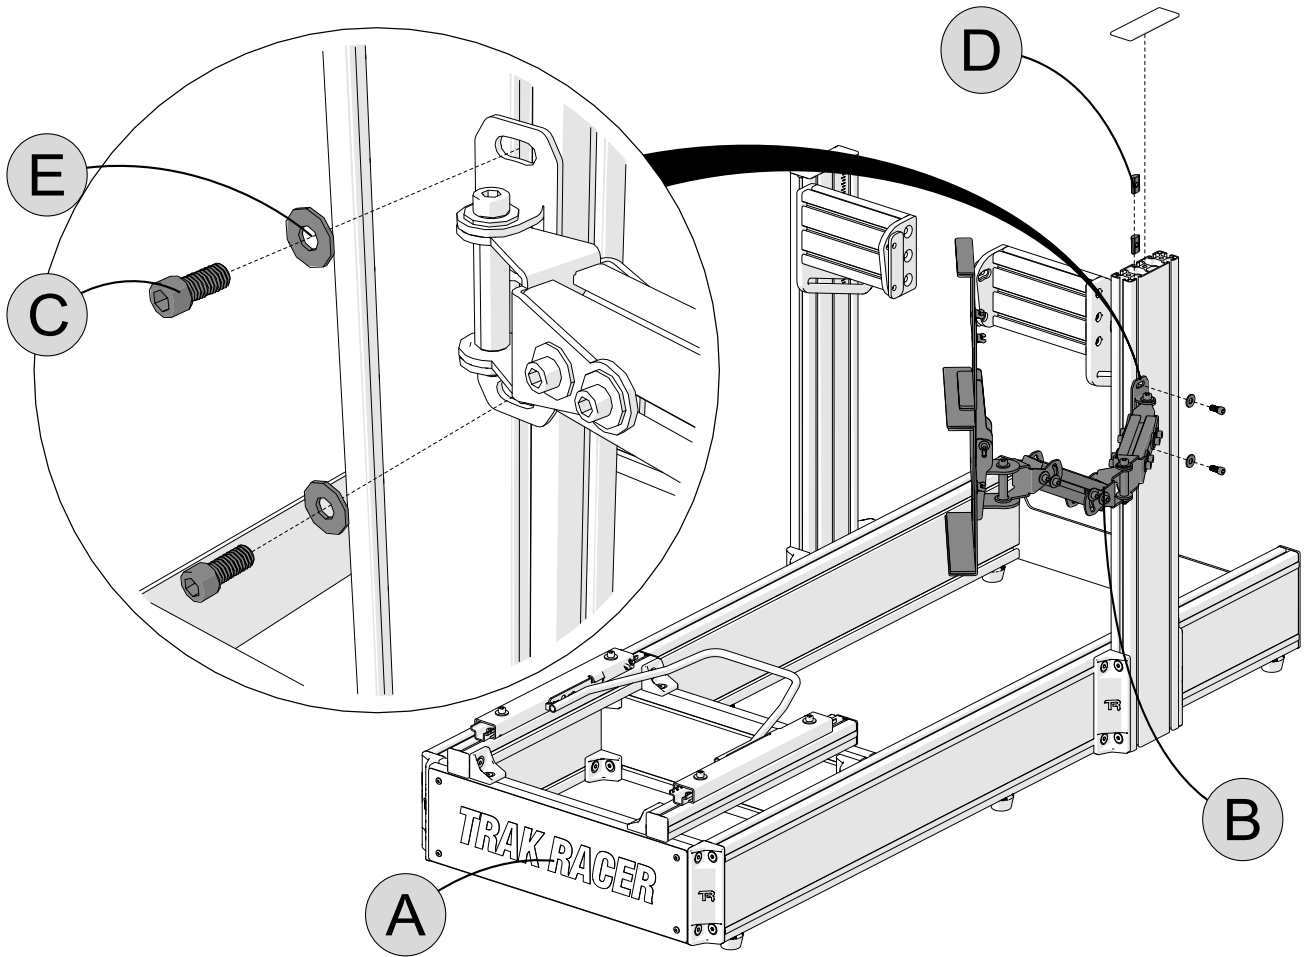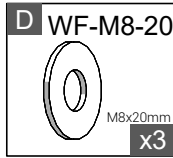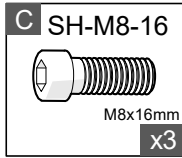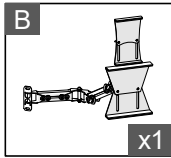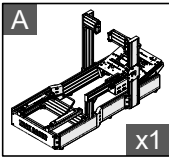

FINISHED

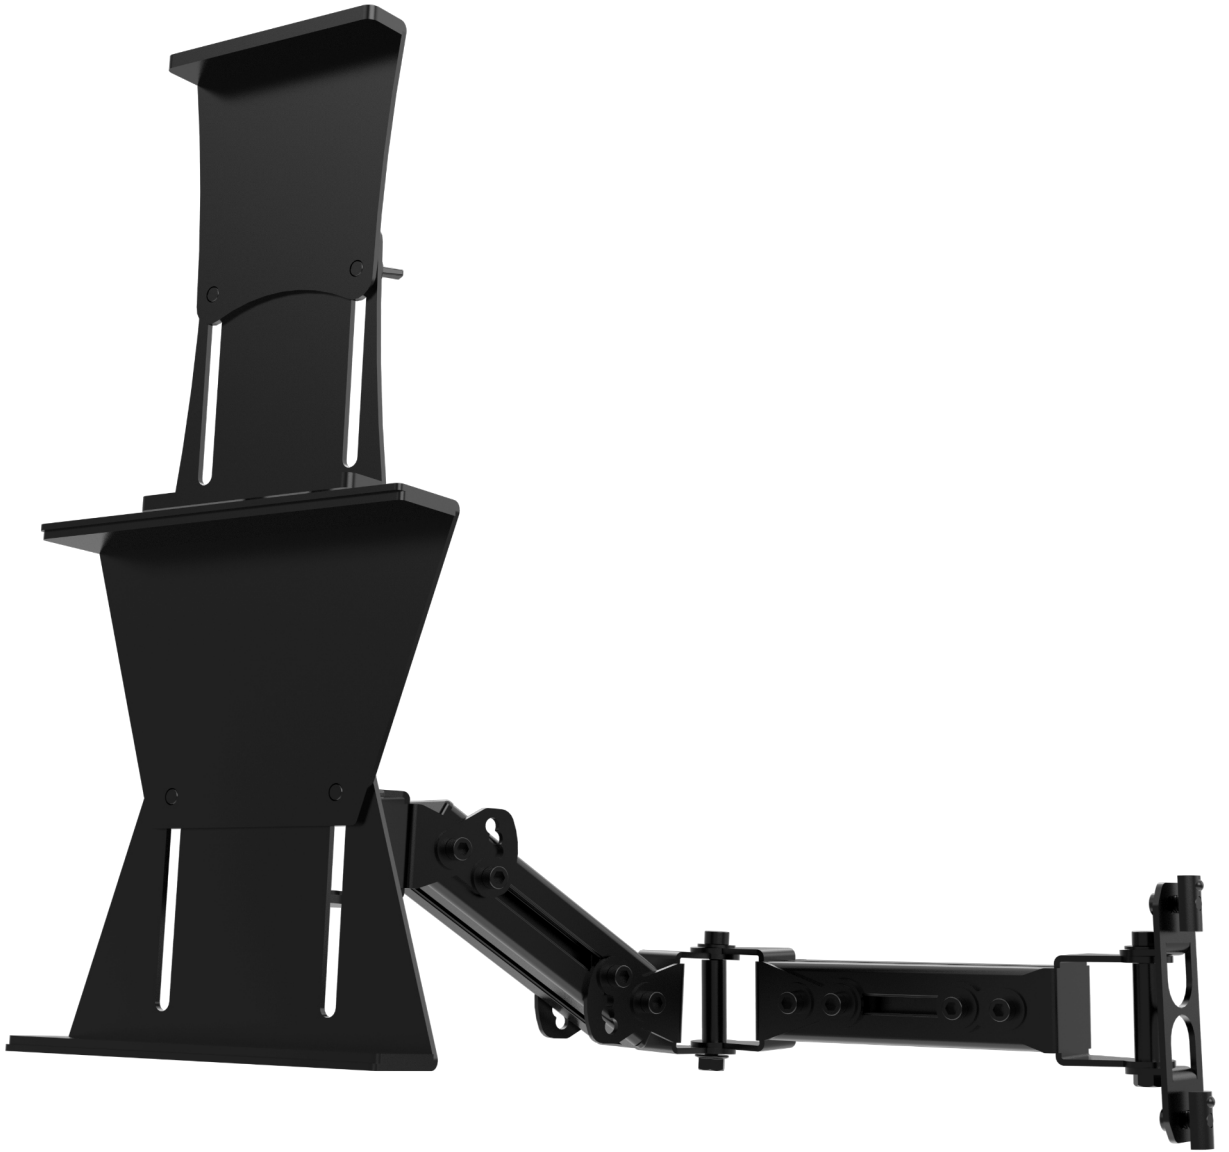

Share your build online and tag us to be featured!



@trakracer



@trakracer



@trak_racer