


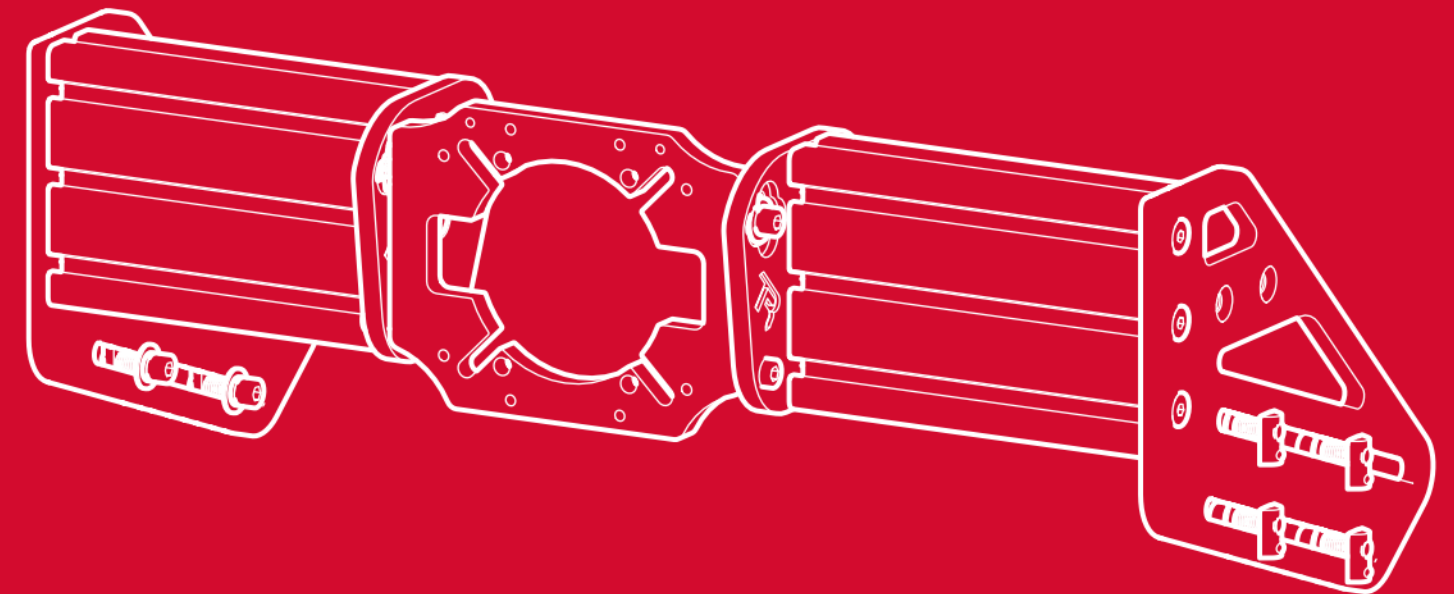

More info at:
WWW.TRAKRACER.COM



or follow us at:



@TRAKRACER

TR80-KBMMS - MANUAL VERSION 1A

TR80-NWNA4-MZ

Assembly Guide



IMPORTANT: Different regions may have different models. Please ensure the part numbers on the following pages match those on your product packaging.

01

SYMBOL LEGEND

01

02

PART LISTS

02

03

ASSEMBLY NOTES

TR80-NWNA4-MZ

03

04

ASSEMBLY INSTRUCTIONS

TR80-NWMA4-MZ

05

SYMBOL LEGEND



IMPORTANT: Since there are different versions of each product based on your region, please make sure you are using the correct set of instructions. The part number below should match the one on your box.



IMPORTANT: Due to the nature of cut aluminum profiles, some metal shavings may remain despite our thorough QA cleaning process. We recommend opening boxes and packaging on a hard surface.



NOTE: Some screws and washers may be pre-installed. These are included in the parts list and will need to be loosened and reattached according to the instructions.



Recommended:
Two people for the task



Safety glasses required



Tighten the hardware



Attention/Priority needed



Keep the hardware loose
For adjustments



Reserve for the next step



Make the necessary adjustments



Mirrored components
(same on both sides)




Break the tab off the corner bracket


PART LISTS

COMPONENTS / ACESSORIES


BOX: TR80-NWMA4

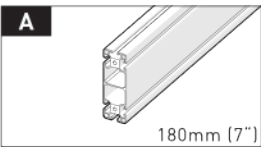


Aluminum Profile
TR-12040-180 **x2**

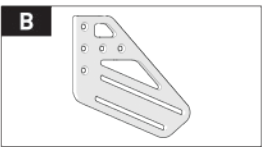


Wheel Mount Outer Plate
WM-TR4-PP **x2**

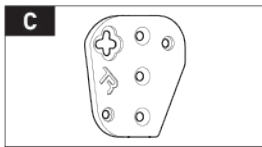


Wheel Mount Inner Plate
WM-TR4-WP **x2**

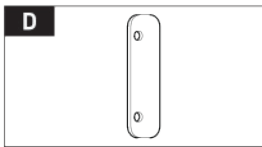


Wheel Mount Spacer
WM-TR4-FN **x4**

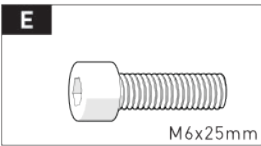


M6x25 Cap Hex Screw
SH-M6-25 **x4**

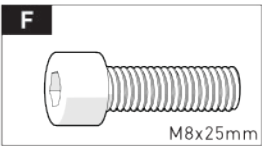

M8x25 Cap Hex Screw
SH-M8-25 **x12**

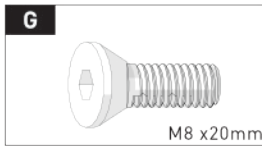


M8x20 Flat Hex Screw
SF-M8-20 **x12**

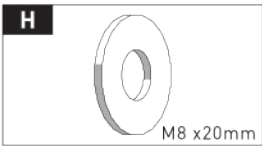

M8x20 Washer (Flat)
WF-M8-20 **x10**




M8 Washer (Lock)
WL-M8 **x8**

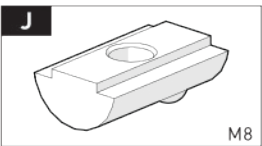


M8 T-Nut
NS-M8 **x8**


BOX: TR80-MZDDM

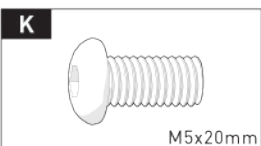


M5x20 Button Hex Screw
SB-M5-20 **x4**

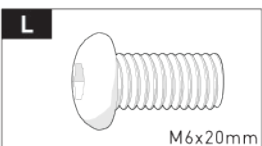


M6x20 Button Hex Screw
SB-M6-20 **x4**

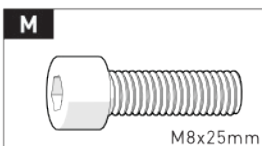

M8x25 Cap Hex Screw
SH-M8-25 **x4**

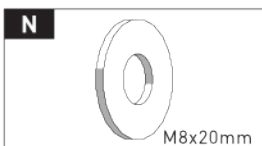

M8x20 Washer (Flat)
WF-M8-20 **x10**

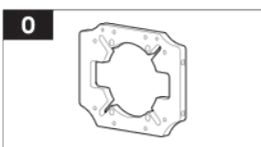


Wheel Front Plate
WM-MF-PP1 **x1**


NOTE: Extra hardware may be included as spare parts

ASSEMBLY NOTES


TR80-NWNA4-MZ

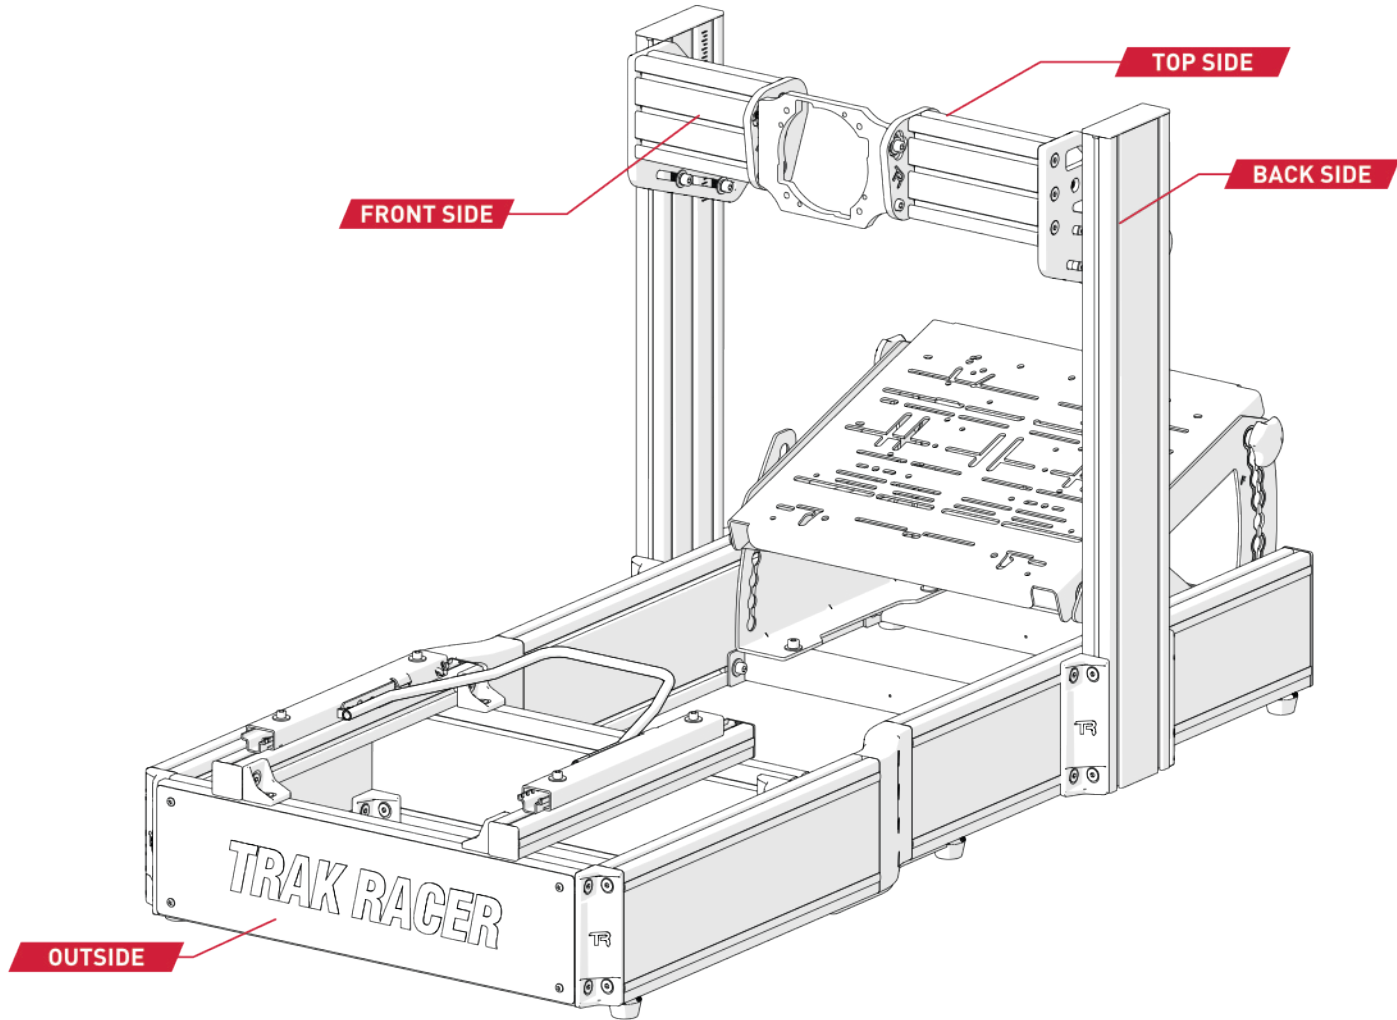

INSTALLATION ORDER FOR SCREWS & WASHERS

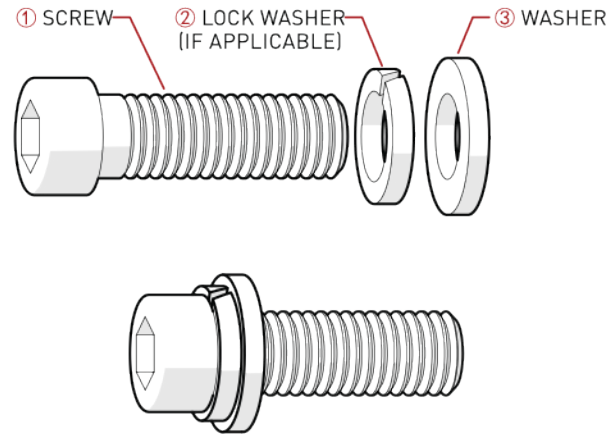

HOW TO MEASURE SCREWS

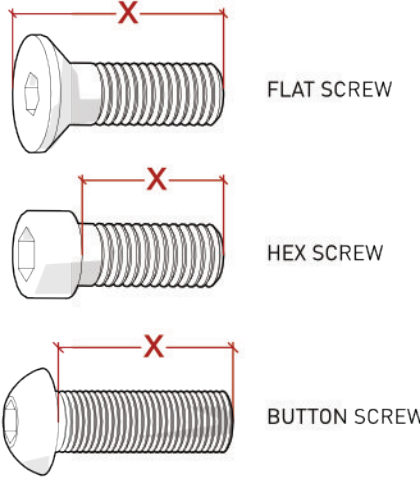


ASSEMBLY NOTES

TR80-NWNA4-MZ

NS-M8 & NS-M6

Slide T-Nuts into the ends of the profiles. Some must be added early, so follow the steps in this manual carefully.

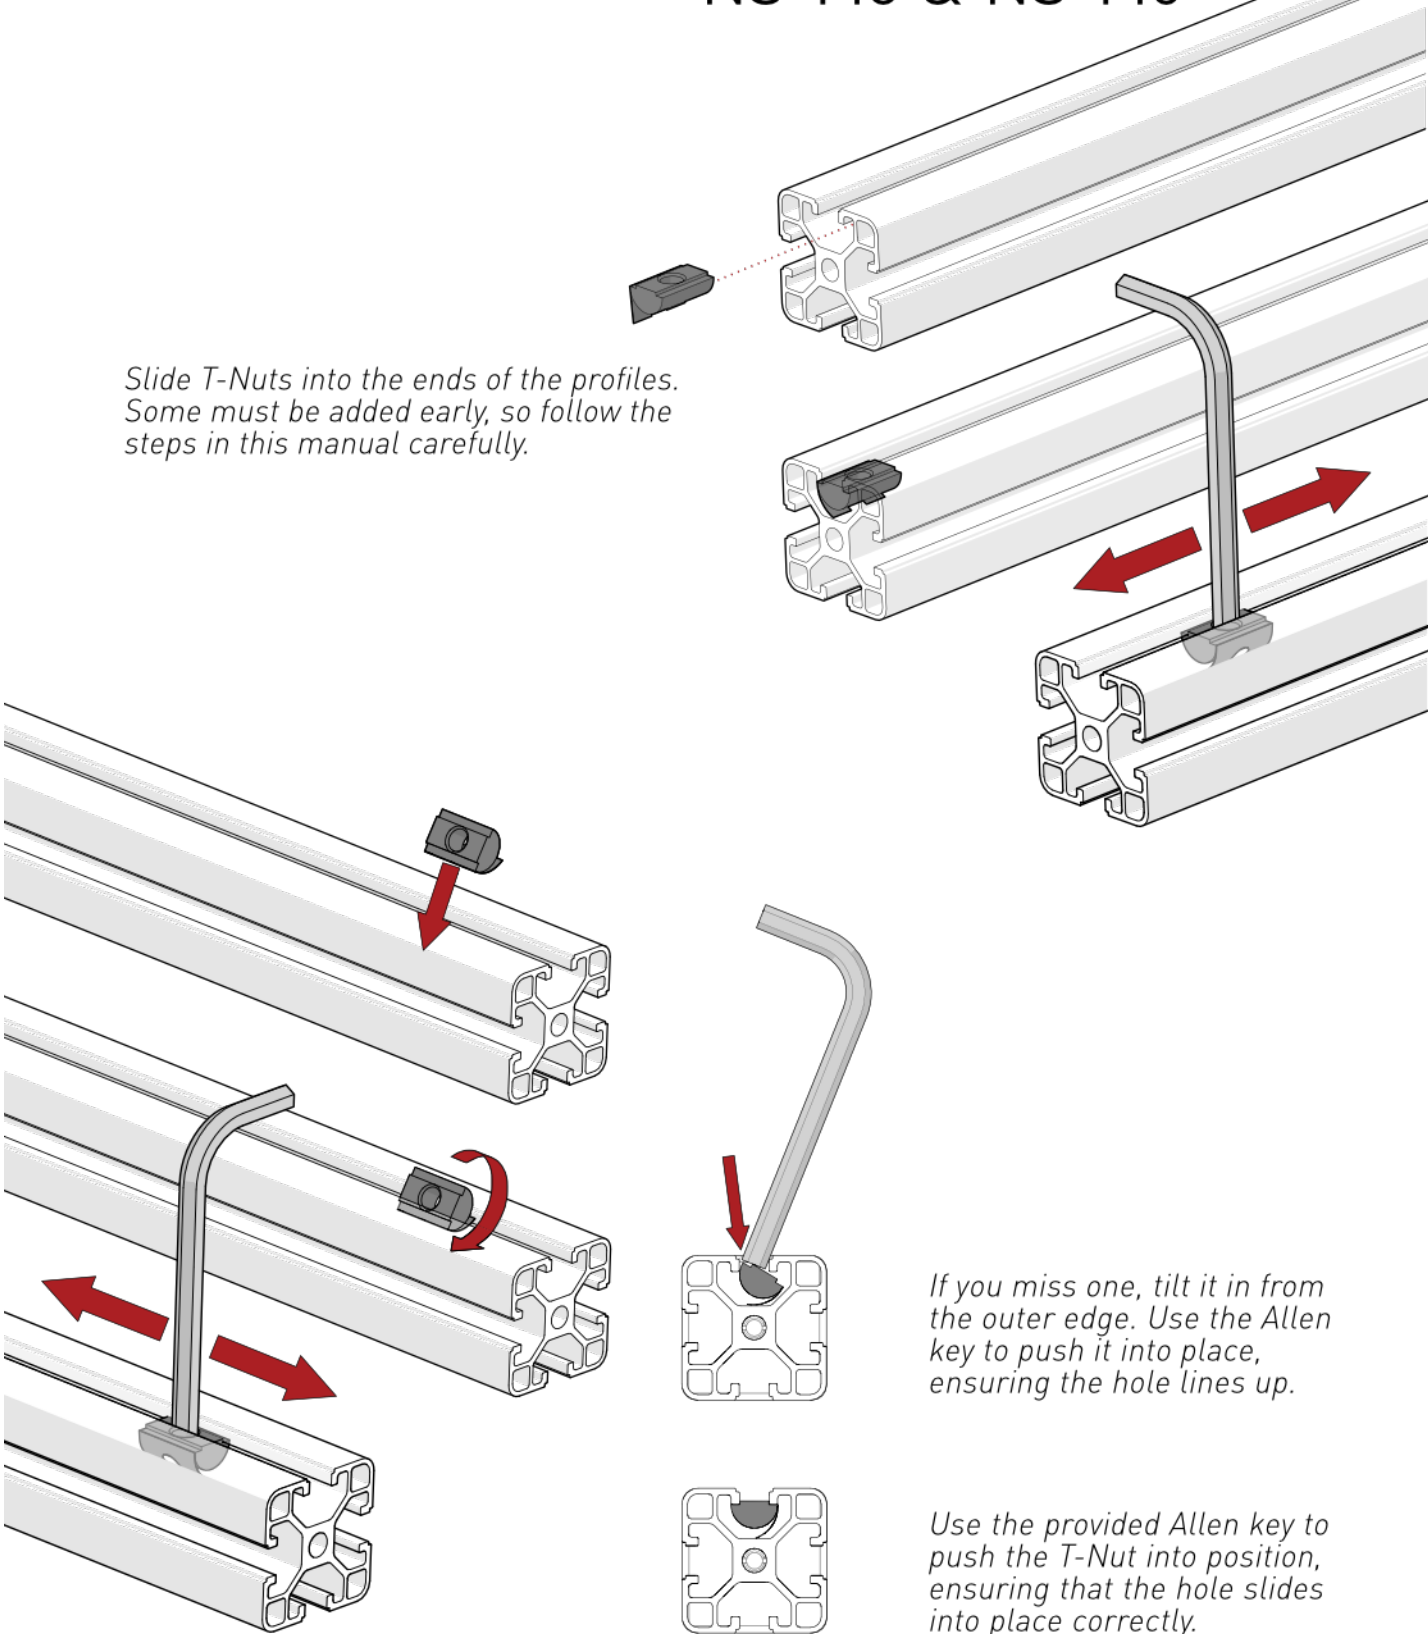


If you miss one, tilt it in from the outer edge. Use the Allen key to push it into place, ensuring the hole lines up.

Use the provided Allen key to push the T-Nut into position, ensuring that the hole slides into place correctly.

ASSEMBLY INSTRUCTIONS

TR80-NWNA4-MZ

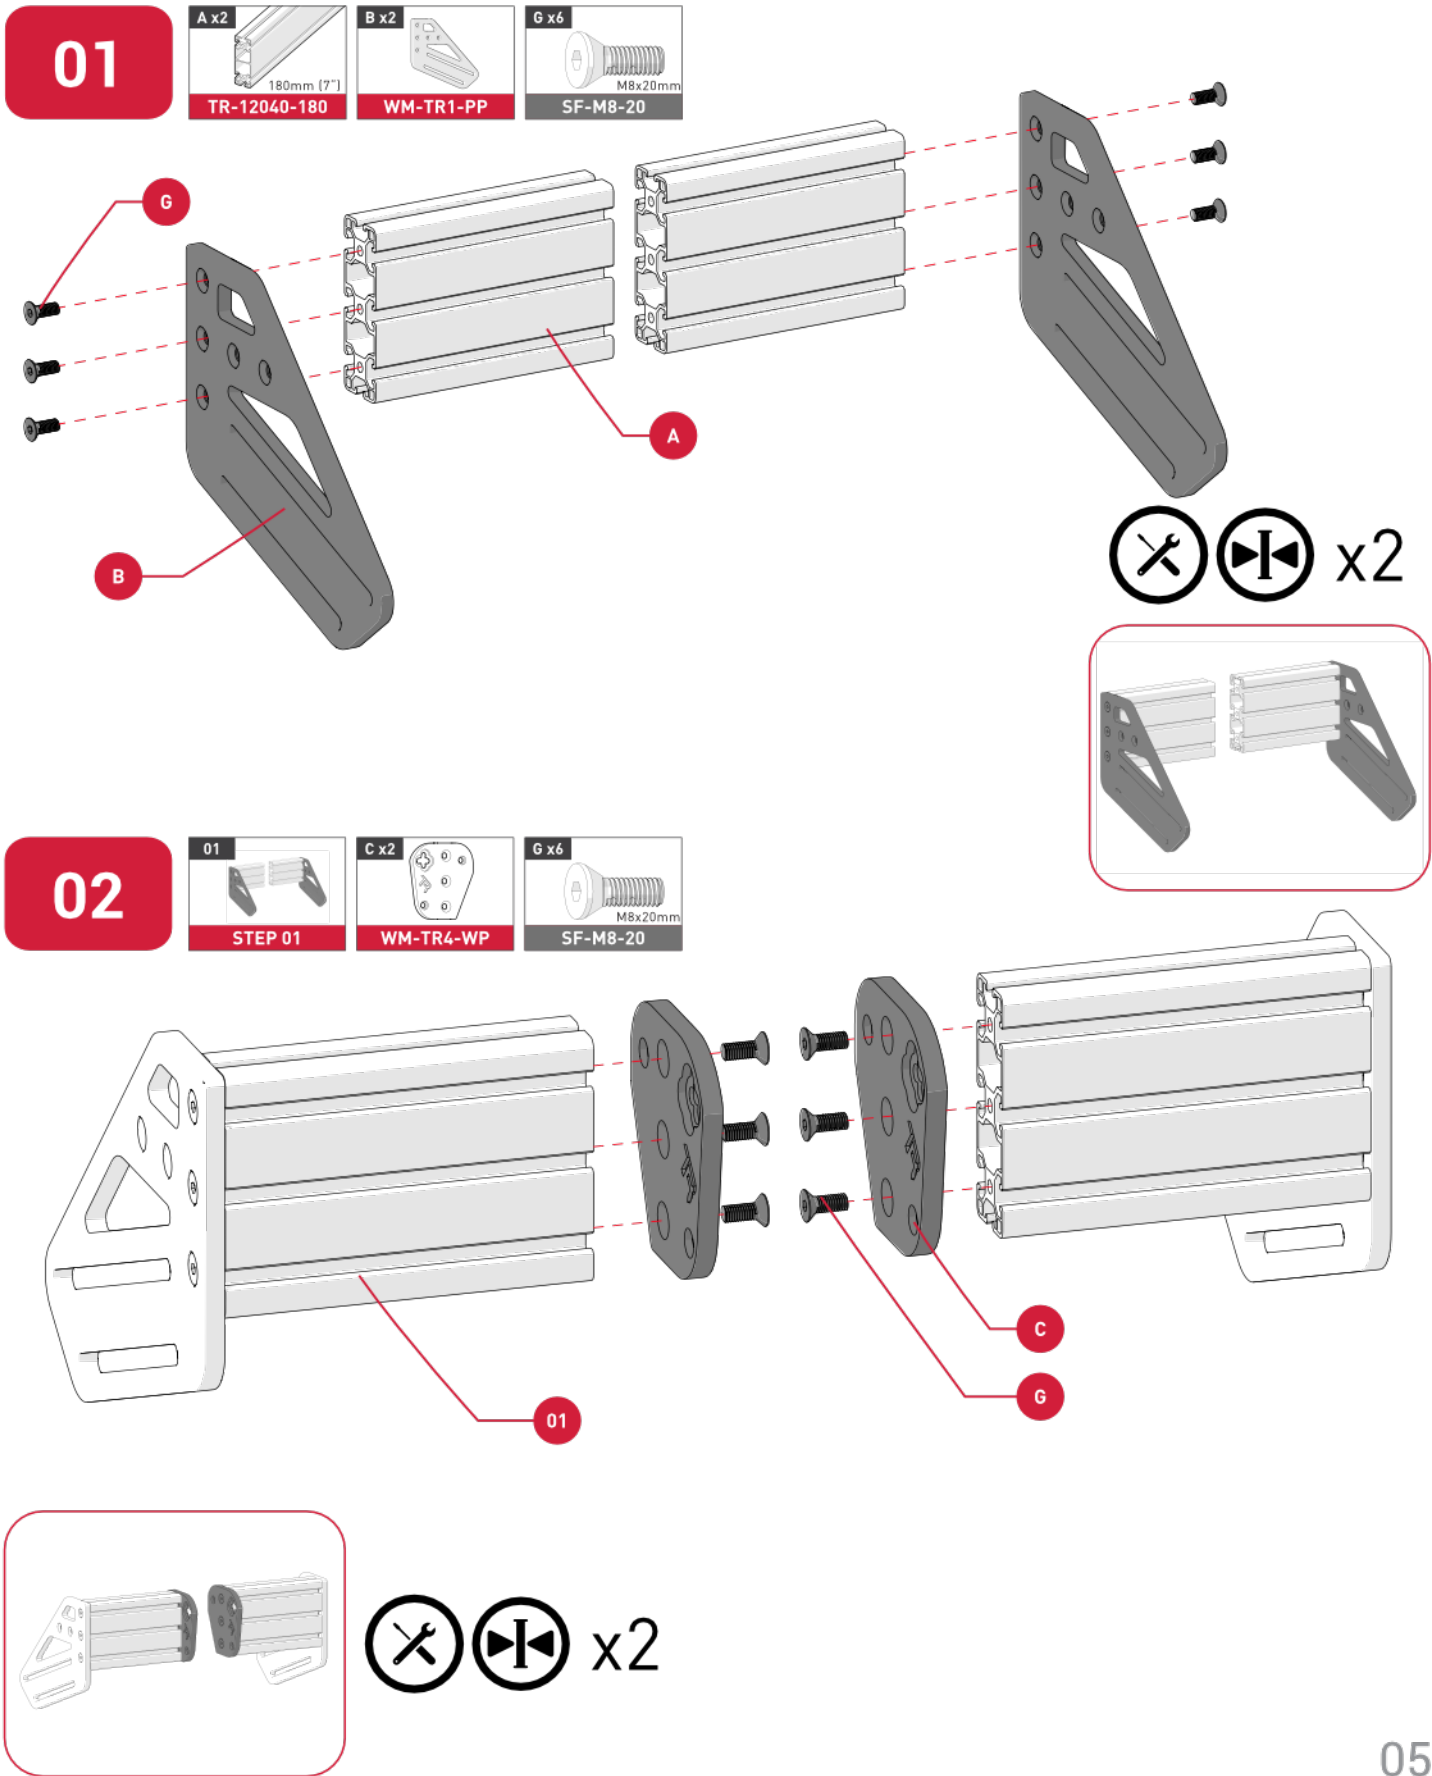


ASSEMBLY INSTRUCTIONS

TR80-NWNA4-MZ


03

- 02
STEP 02
- 0 x1
WM-MF-P1
- M x4
SH-M8-25
- N x2
WF-M8-20

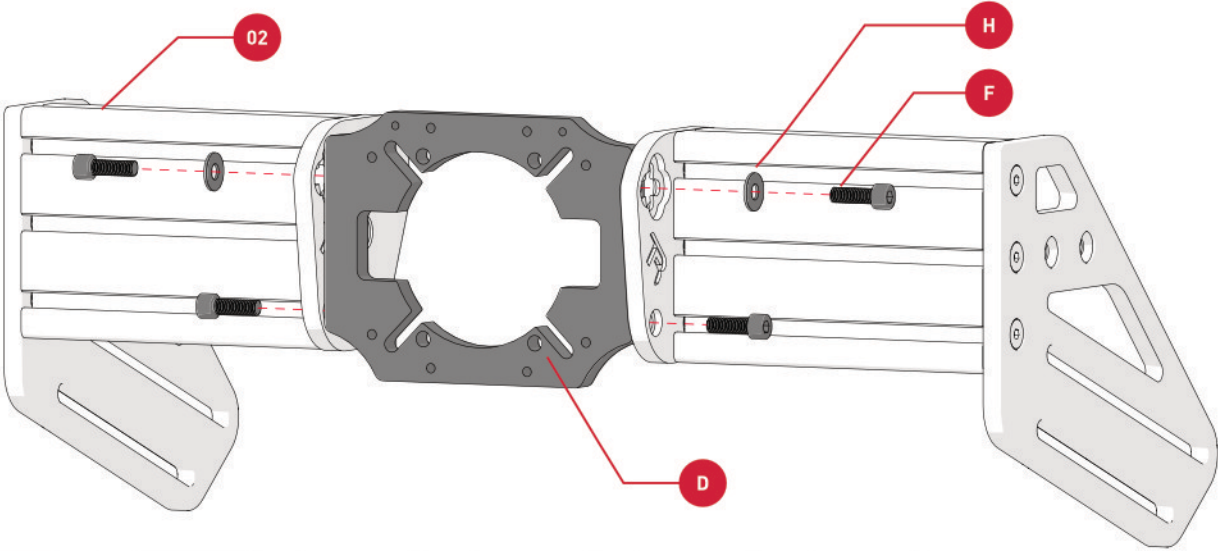

04


- 03
STEP 03
- F x8
SH-M8-25
- H x8
WF-M8-20
- I x8
WL-M8
- J x8
NS-M8

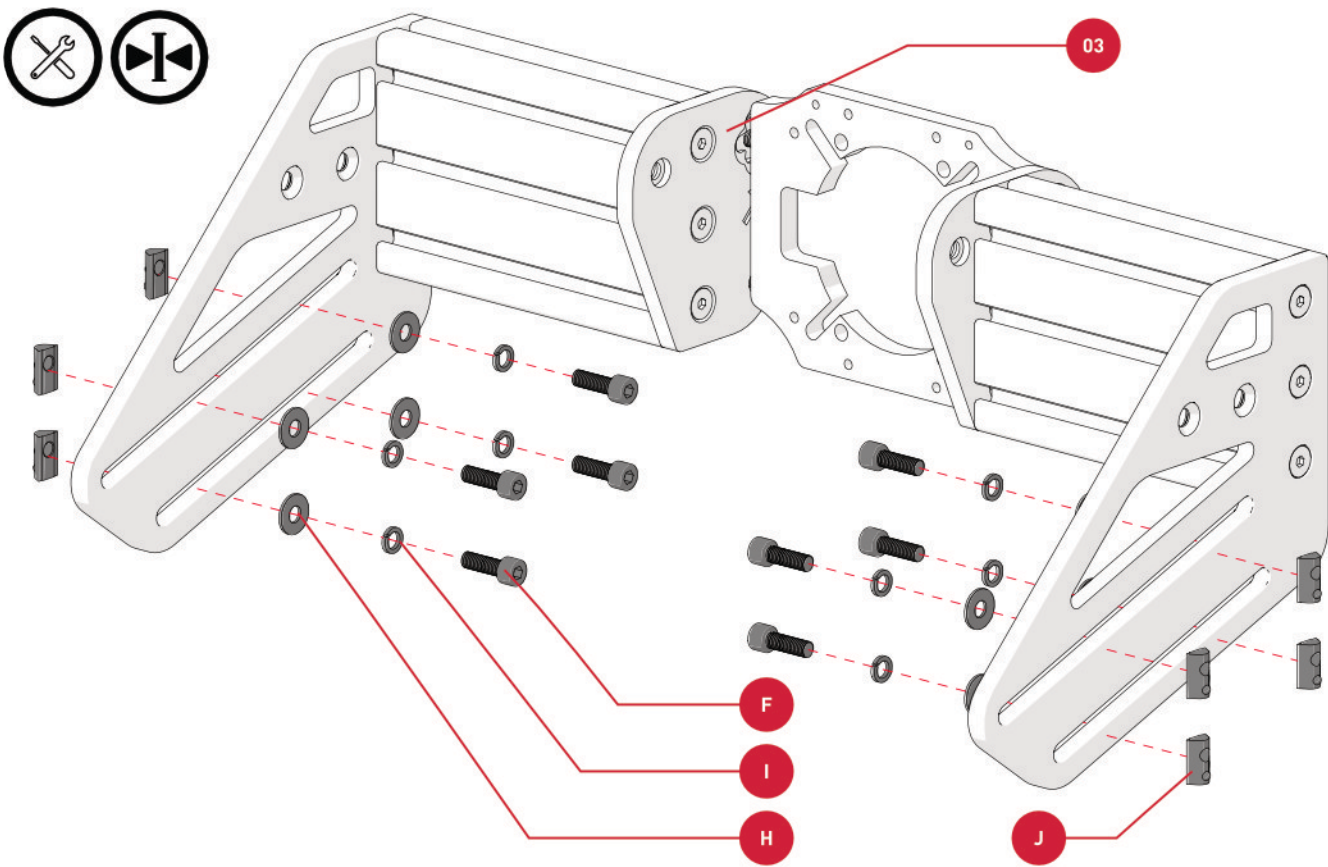

ASSEMBLY INSTRUCTIONS

TR80-NWNA4-MZ


05

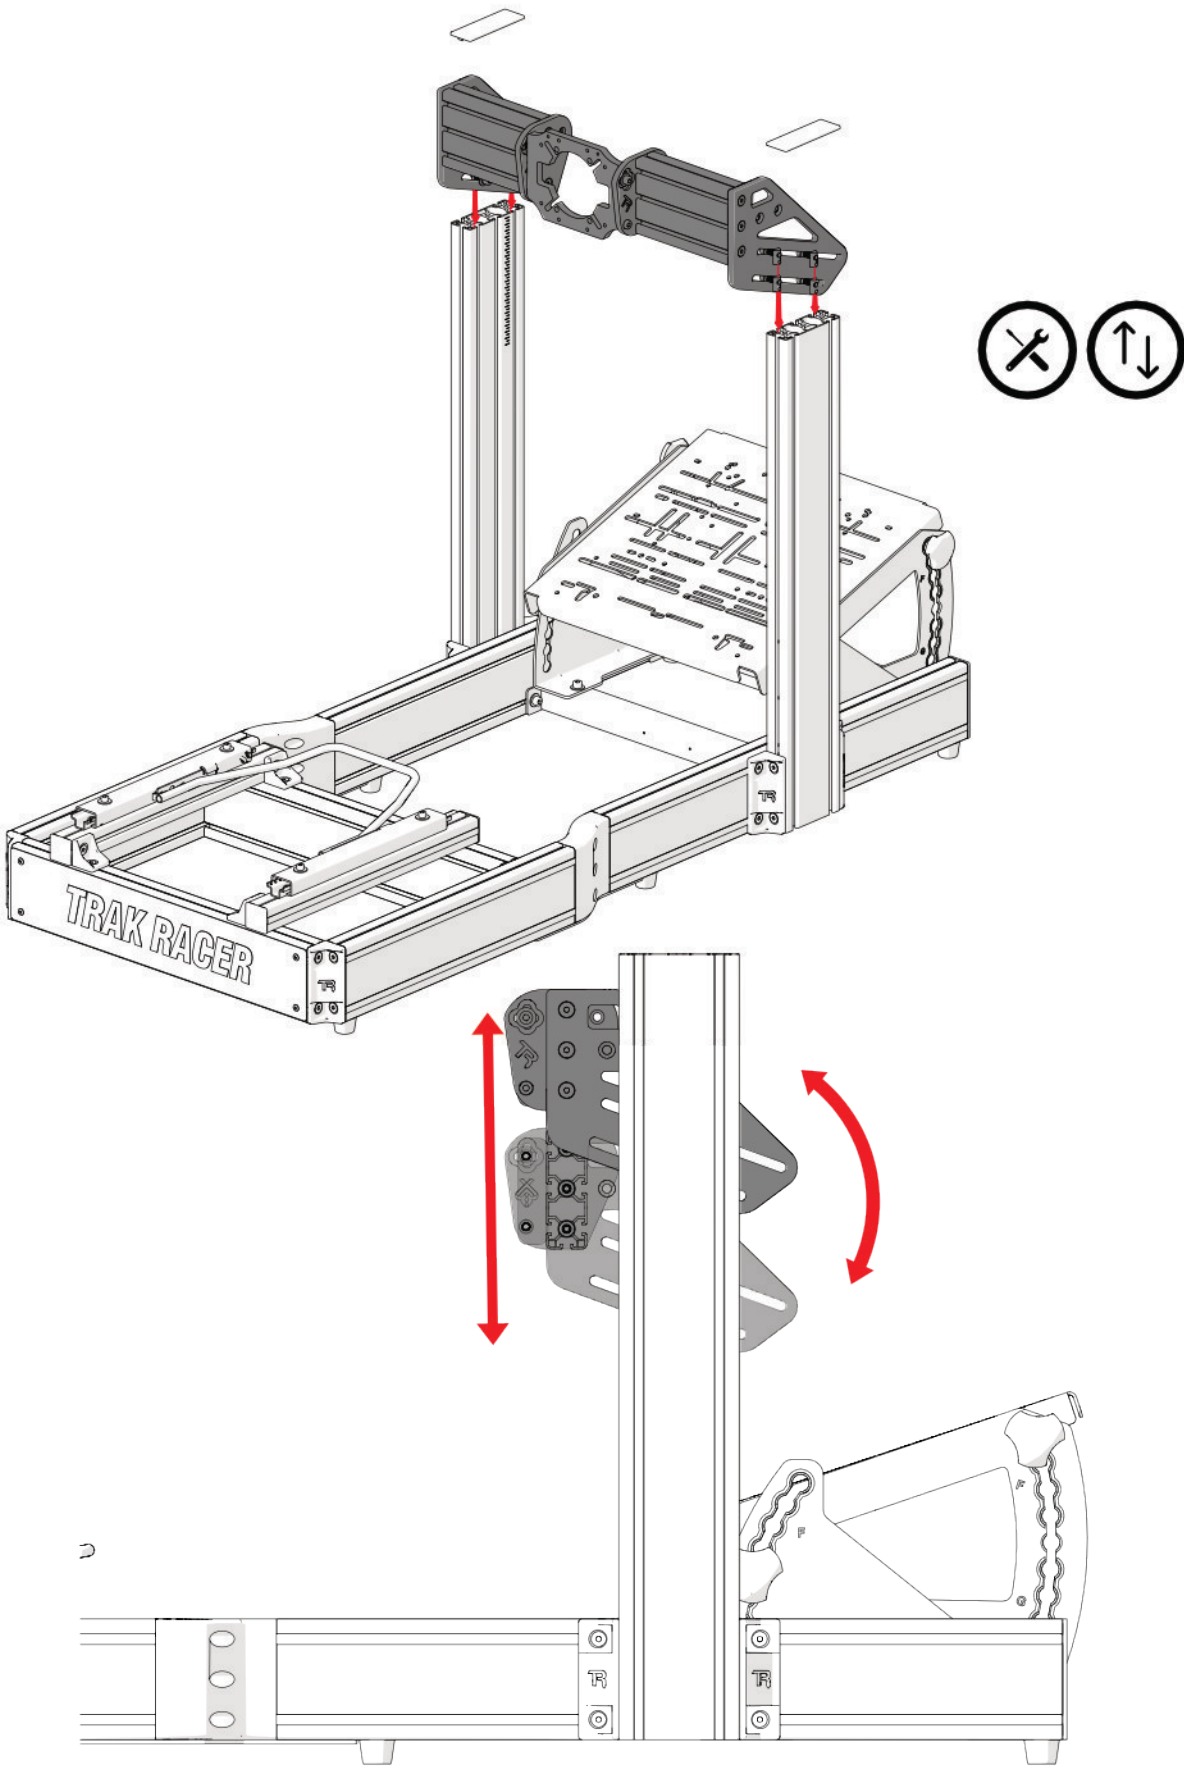

ASSEMBLY INSTRUCTIONS

TR80-NWNA4-MZ

06

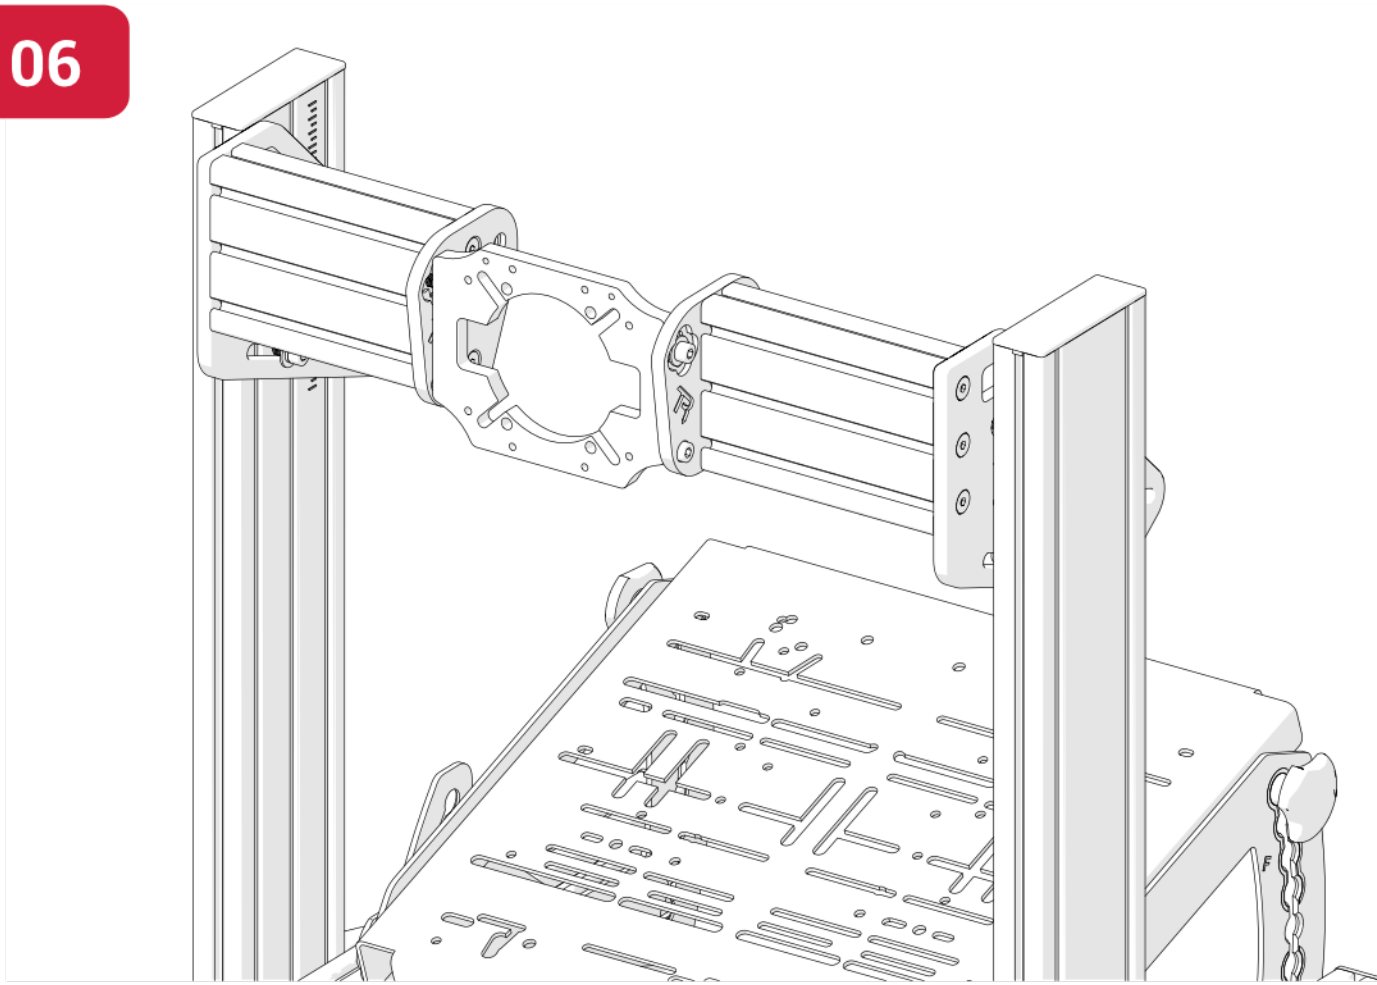

ASSEMBLY INSTRUCTIONS

TR80-NWNA4-MZ