



Quick Guide



售后客服

RS V2 Steering Wheel






CONTENTS

ENGLISH.....	1
简体中文.....	4
繁體中文.....	8

01 Product Description

- Hall Sensor Magnetic Paddles with Dual Clutch
- RGB Programmable LED Shift Light
- 10 illuminated programmable mechanical keys
- Racing Quick Release
- Aluminum Alloy Back Shell

02 How to Use the Quick Release OR Quick Release Setup

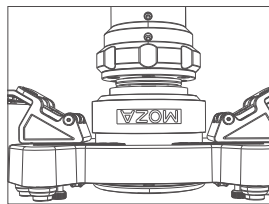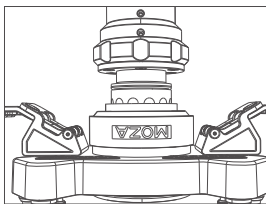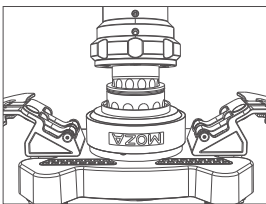


1. Align the 6 steel balls on the steering wheel quick release female connector to the corresponding 6 grooves on the base quick release male connector.
2. Press the steering wheel down to join the connectors.
3. Once locked check to ensure the steering wheel is connected to base by rotating the wheel.
4. To remove the steering wheel, pull up the golden sleeve with both hands and remove the steering wheel at the same time.

03 Racing Wheel Configuration

The steering wheel can be set conveniently and quickly in the MOZA Pit House Software.

- Joystick mode: push buttons or cross keys
- RPM indicator switch modes: choice of three modes: rpm, off, and constant
- Indicators display mode: mode 1 and mode 2. Detailed explanations will pop up when clicking each option.
- Rev speed prompt setting: there are four modes according to the timing relationship between the rev speed and the shift indicator light, which are advanced, standard, extreme, and custom mode.
- Brightness adjustment: adjust the brightness of the shift indicator.
- Customize button colors: Customize button colors through specific button combinations. For detailed instructions, please refer to the button combination guide provided.
- Button combinations: click on the button combination tab on the upper right corner of the steering wheel page to show a list of button input numbers and programming input combinations.




- Indicator color adjustment: drag the color block you like to the indicator to change the color.
- Shifter paddle calibration: when sensing abnormalities in the shifter paddle, click here to calibrate.

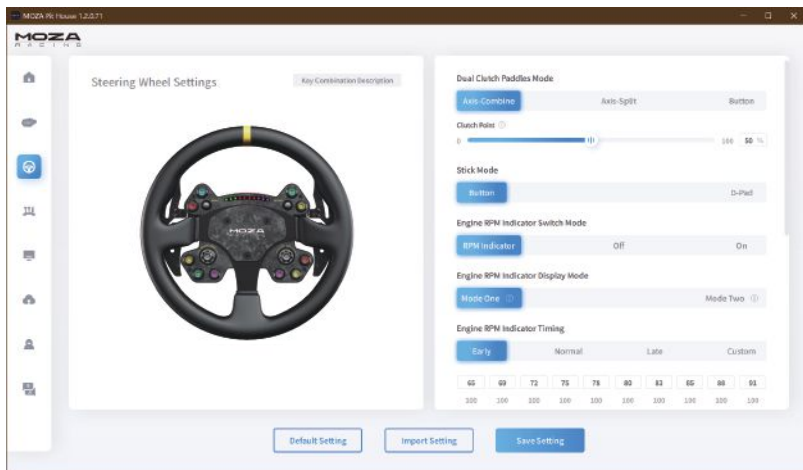

(for detailed steering wheel settings and functions, please visit the official website of MOZA Racing)


04 Installation of Paddle Approach Block

Place the steering wheel on a flat surface facing down, use a hexagonal wrench to remove the screw on the side of the trigger lever of the shift paddle, and then use a wrench to lift the latch from the side of the magnetic paddle, and pull the trigger lever of the paddle outward to obtain the best space for disassembling and assembling paddles; use a hexagonal wrench to remove the screws on the shift paddles, put on the heightening block and tighten with the long screws, and finally put the latch back in place and clamp screws. The heightening block could help shorten the distance between the magnetic shifter paddles and hands by 8mm.

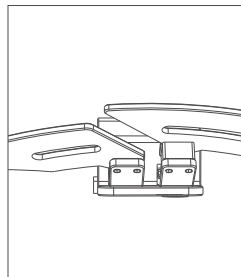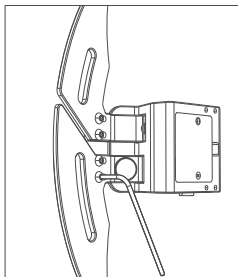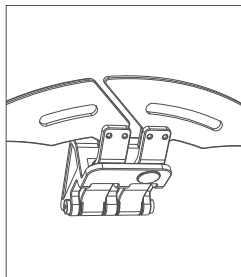

05 Button Combination Functions

Utilize button combinations to adjust maximum steering angle, switch joystick modes, configure dashboard UI interfaces, set base parameters, and more. Detailed instructions can be found on the Steering Wheel Settings page.

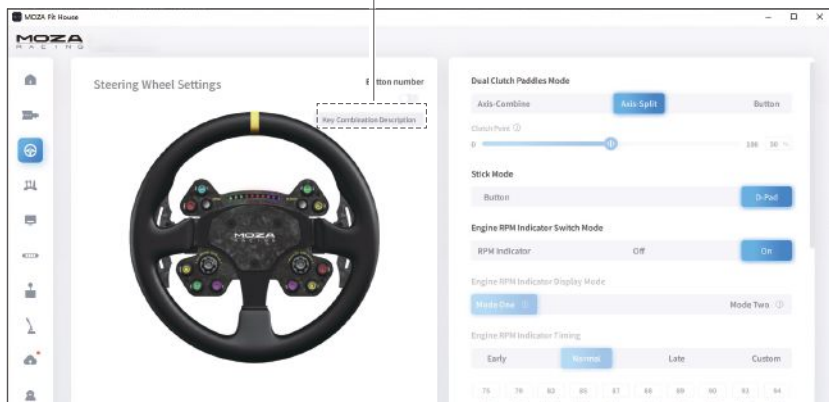

06 Packing List

1. RS steering wheel
2. tool kit:
 - Hexagon screwdriver
 - 8mm aluminum alloy approach block x4

M3x14 screw x8

07 Product Spec

Frame material: Brushed aluminum alloy.

Panel material: Forged Carbon Fiber.

Rear shell material: Aluminum alloy.

Paddle material: 3mm thick forged carbon fiber

Size: 13 inches (325mm).

Magnetic paddle: 2.

Double clutch paddles: 2.

Mechanical keyboard texture buttons: 10 (can be illuminated, 9 colors adjustable)

20 Section knob (can be pressed): 2.

Universal rocker (can be depressed): 2.

Highlight led RGB beads: 10.

LED color: 7-color custom.

Intelligent telemetry: Supported.

Lights setting via Moza Pit House: Supported.

Steering Wheel Quick Release: Racing Quick Release.

Signal transmission mode: Wire

Magnetic shifter paddle sensor:

Non-contact hall sensor


Magnetic suction paddle mode:

Double Clutch / Single Clutch / Switch.

01 产品介绍

- 双离合霍尔磁吸拨片
- RGB可编程LED换挡提示灯
- 10个发光可编程机械键盘式按键
- 赛用级快拆
- 铝合金后壳

02 快拆使用方法

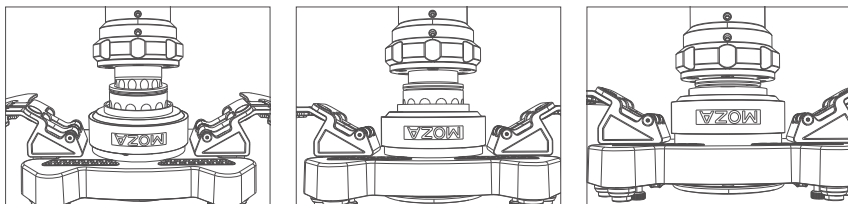


1. 将方向盘快拆母头上6颗钢珠的位置与底座快拆公头的6个凹槽对应
2. 将快拆往盘面方向按压
3. 快拆将自动归位锁紧,若无归位,可尝试轻微转动盘面或取下后再安装
4. 如需拆取盘面,用双手捏住金色部分,同时拔出盘面

03 方向盘配置

在MOZA Pit House软件中可以方便快捷地对方向盘进行设置。




- 摇杆模式:设置摇杆操作模式,可设置为按键和十字键
- 指示灯开关模式:指示灯状态调节,分为转速随动,灯光关闭和灯光常亮
- 指示灯显示模式:共分为模式一和模式二,当鼠标移动到选项上时会弹出详细解释
- 转速提示设置:根据转速与换挡指示灯亮起的时机关系,分为提前型,标准型,极限型和自定义模式
- 亮度调节:调节换挡指示灯的亮度
- 按键灯颜色调节:支持通过方向盘组合键调节按键灯的颜色,具体的按键灯颜色调节组合键见组合键说明
- 方向盘组合键:点开方向盘图片右上角的组合键说明,记住组合键后即可快速调节功能
- 指示灯颜色调节:将喜欢的色块拖动到指示灯上即可更换颜色
- 拨片校准:当拨片感应异常时,通过点击此处进行拨片校准

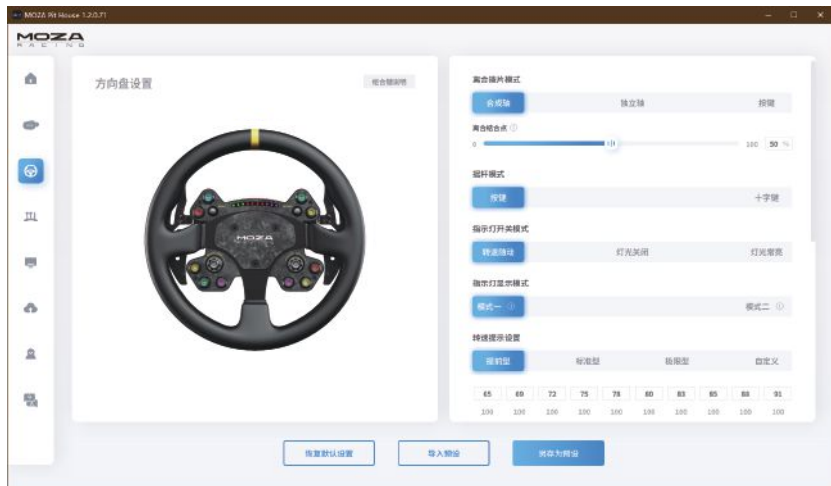

(详细方向盘设置与功能, 请访问MOZA Racing官网)

04 拨片接近块的安装

将方向盘放置于平面上使盘面朝下, 使用六角扳手取下换挡拨片触发杆一侧的螺丝, 再用扳手从磁吸拨片侧顶开插销, 将拨片触发杆向外拉以获得拆装拨片的最佳空间; 使用六角扳手将换挡拨片上的螺丝取下, 垫上增高块后用附带的长螺丝拧紧, 最后将插销归位并装回螺丝, 通过此垫片可将拨片与手的距离拉近8mm。

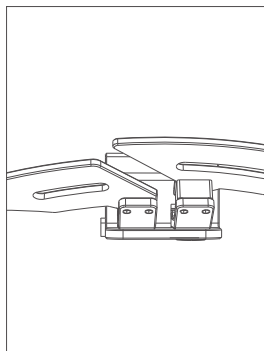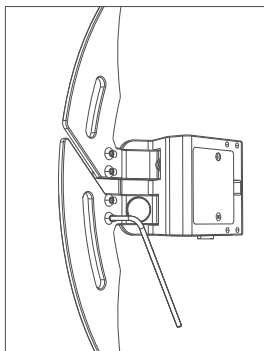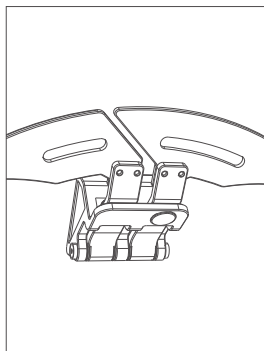

05 组合按键说明

组合键支持切换最大转向角, 摇杆模式, 仪表盘的UI以及基座参数等功能, 具体的功能说明见方向盘设置页面的组合键说明



06 包装清单

1. RS方向盘
2. 工具包:
 - 六角螺丝刀
 - 8mm铝合金接近块x4
 - M3x14螺丝x8

07 产品参数

骨架材质: 拉丝铝合金
面板材质: 锻造碳纤维
外壳材质: 航空级铝合金
拨片材质: 3mm厚锻造碳纤维
尺寸: 13英寸 (325mm)
磁吸拨片: 2个
双离合拨片: 2个
机械键盘质感按键: 10个 (可发光, 9色可调)
20段旋钮 (可按压): 2个
万向摇杆 (可按压): 2个

高亮LED RGB灯珠: 10颗
LED色彩: 7色自定义
智能测速: 支持
通过MOZA Pit House设置灯光: 支持
拆装方式: 定制赛车快拆
信号传输方式: 导电滑环
磁吸拨片感应方式: 霍尔无接触式
磁吸拨片模式: 双离合式/单离合式/开关式

产品保修卡

产品型号		购买日期	
用户姓名		用户电话	
产品条码		通讯地址	

经销商信息(签章)

产品保修条例

保修期

自购机日起, 基座主体, 方向盘, 踏板和仪表显示屏保修12个月。设备外壳、说明书、线材、螺丝、扳手、包装等不在"一年免费保修服务"范围内, 但您可以选择有偿服务。

购买者在以下条件下不享受免费保修服务, 但您可以选择有偿服务。

1. 超过三包有效期的;
2. 无三包凭证及有效发票的, 但能够证明该产品在三包有效期内的除外;
3. 包修凭证上的型号与修理产品型号不符或者涂改的;
4. 非本公司特约维修人员拆动造成损坏的;
5. 因不可抗力造成损坏的;
6. 未按产品使用说明书要求使用、维护、保养而造成损坏的。




保修期限鉴于产品部位、不同国家法律法规等差异, 将有所不同。相关国家与区域的保修期限, 请咨询MOZA官方或购买时联系的MOZA授权经销商。



01 產品介紹

- 雙離合霍爾磁吸撥片
- RGB可編程LED換檔提示燈
- 10個發光可編程機械鍵盤式按鍵
- 賽用級快拆
- 鋁合金後殼

02 快拆使用方法

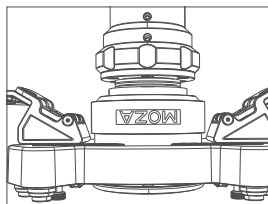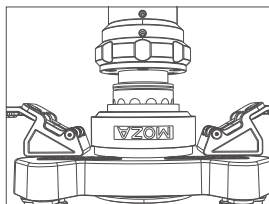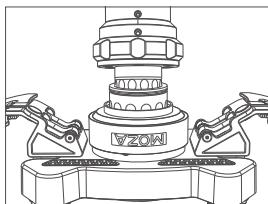


1. 將方向盤快拆母頭上6顆鋼珠的位置與底座快拆公頭的6個凹槽對應
2. 將快拆往盤面方向按壓
3. 快拆將自動歸位鎖緊，若無歸位，可嘗試輕微轉動盤面或取下後再安裝
4. 如需拆取盤面，用雙手捏住金色部分，同時拔出盤面

03 方向盤配置

在MOZA Pit House軟體中可以方便快捷地對方向盤進行設置。

- 搖杆模式：設置搖杆操作模式，可設置為按鍵和十字鍵
- 指示燈開關模式：指示燈狀態調節，分為轉速隨動，燈光關閉和燈光常亮
- 指示燈顯示模式：共分為模式一和模式二，當滑鼠移動到選項上時會彈出詳細解釋
- 轉速提示設置：根據轉速與換檔指示燈亮起的時機關係，分為提前型，標準型，極限型和自定義模式
- 亮度調節：調節換檔指示燈的亮度
- 按鍵燈顏色調節：支持通過方向盤組合鍵調節按鍵燈的顏色，具體的按鍵燈顏色調節組合鍵見組合鍵說明
- 方向盤組合鍵：點開方向盤圖片右上角的組合鍵說明，記住組合鍵後即可快速調節功能
- 指示燈顏色調節：將喜歡的色塊拖動到指示燈上即可更換顏色
- 撥片校準：當撥片感應異常時，通過點擊此處進行撥片校準



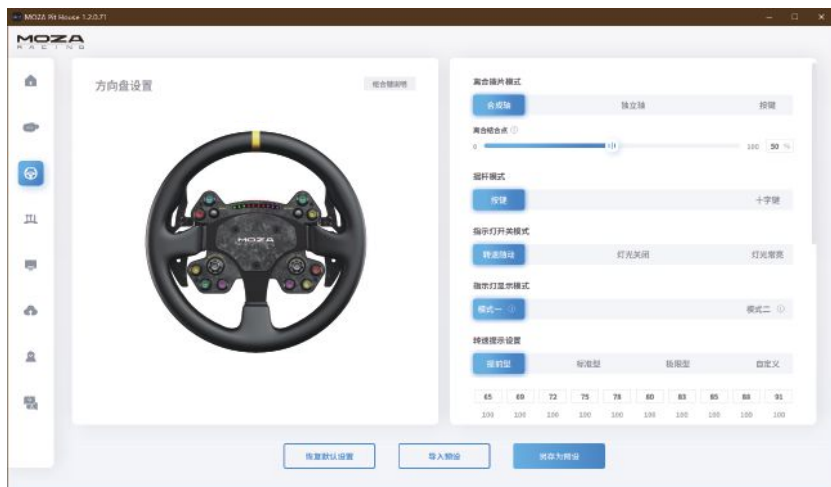


(詳細方向盤設置與功能，請訪問MOZA Racing官網)

注意：搭配有2.4G基座，方向盤和基座2.4G會互相配對

04 撥片接近塊的安裝

將方向盤放置於平面上使盤面朝下，使用六角扳手取下換擋撥片觸發杆一側的螺絲，再用扳手從磁吸撥片側頂開插銷，將撥片觸發杆向外拉以獲得拆裝撥片的最佳空間；使用六角扳手將換擋撥片上的螺絲取下，墊上增高塊後用附帶的長螺絲擰緊，最後將插銷歸位並裝回螺絲，通過此墊片可將撥片與手的距離拉近8mm。

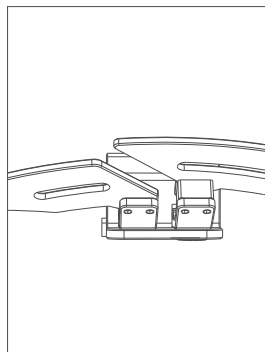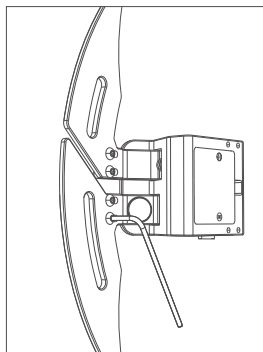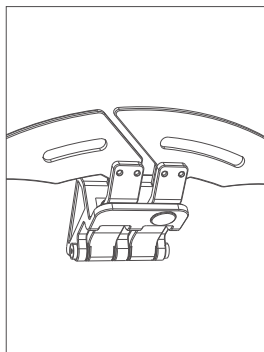

05 組合按鍵說明

組合鍵支持切換最大轉向角, 搖杆模式, 儀錶盤的UI以及基座參數等功能, 具體的功能說明見方向盤設置頁面的組合鍵說明



06 包裝清單

1. RS V2方向盤
2. 工具包:
 - 六角螺絲刀
 - 8mm鋁合金接近塊x4
 - M3x14螺絲x8

07 產品參數

骨架材質: 拉絲鋁合金
面板材質: 鍛造碳纖維
後殼材質: 航空級鋁合金
撥片材質: 3mm厚鍛造碳纖維
尺寸: 13英寸 (325mm)
磁吸撥片: 2個
雙離合撥片: 2個
機械鍵盤質感按鍵: 10個 (可發光, 9色可調)
20段旋鈕 (可按壓): 2個
萬向搖杆 (可按壓): 2個

高亮LED RGB燈珠: 10顆
LED色彩: 7色自定義
智能遙測: 支持
通過MOZA Pit House設置燈光: 支持
拆裝方式: 定制賽車快拆
信號傳輸方式: 導電滑環
磁吸撥片感應方式: 霍爾無接觸式
磁吸撥片模式: 雙離合式/單離合式/開關式

產品保固卡

產品型號		購買日期	
用戶姓名		用戶電話	
產品條碼		通訊地址	

經銷商資訊(簽章)

產品保固條例

保固期

自購機日起, 基座主體, 方向盤, 踏板和儀錶顯示幕保固12個月。設備外殼、說明書、線材、螺絲、扳手、包裝等不在“一年免費保固服務”範圍內, 但您可以選擇有償服務。購買者在以下條件下不享受免費保固服務:

1. 超過保固有效期的;
2. 無保固憑證及有效發票的, 但能夠證明該產品在保固有效期內的除外;
3. 保固憑證上的型號與維修產品型號不符或者塗改的;
4. 非本公司特約維修人員拆動造成損壞的;
5. 因不可抗力造成損壞的;
6. 未按產品使用說明書要求使用、維護、保養而造成損壞的; 保固期限鑒於產品部位、不同國家法律法規等差異, 將有所不同。相關國家與區域的保固期限, 請 諮詢MOZA官方或購買時聯繫的MOZA授權經銷商。

根據低功率射頻器材技術規範:

取得審驗證明之低功率射頻器材, 非經核准, 公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。前述合法通信, 指依電信管理法規規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

製造商名稱: 深圳市固勝智能科技有限公司

地址: 深圳市南山區南山智園崇文園區3號樓1903-1904

電話: 0755-26418051



Manufacturer: Shenzhen Gudsen Technology Co., Ltd
Address: Room 1903-1904, Building 3, Nanshan
ZhiyuanChongwen Park, No. 3370 Liuxian Avenue,
Nanshan District, Shenzhen China
Web: www.mozaracing.com
E-mail: info@mozaracing.com
Made in China

EU Representative: Gudsen Technology EU GmbH
Address: Birkenstrasse 23, 40233 Düsseldorf
Email: support@gudsen.com

UK Representative: Gudsen Technology UK Limited
Address: Tc-Abo, Luminous House, 300 South Row
Milton Keynes, MK9 2FR, United Kingdom
Email: support@gudsen.com